

T400A/B

Eetwagon
Wagon-restaurant
Dining car
Speisewagen
Vagón restaurante
Vagone ristorante

Montagehandleiding Notice de montage Assembling manual Montageanleitung Instrucciones para el montaje Istruzioni di installazione


Leeftijd
Age group
Age / Alter
Edad / Età
2 - 8

EUROPLAY nv
Eegene 9
B-9200 DENDERMONDE
tel. 32.52.22 66 22
fax.32.52.22 67 22
www.europlay.eu


Dat.: 14/07/2017

Rev.: -


Page: 1/7

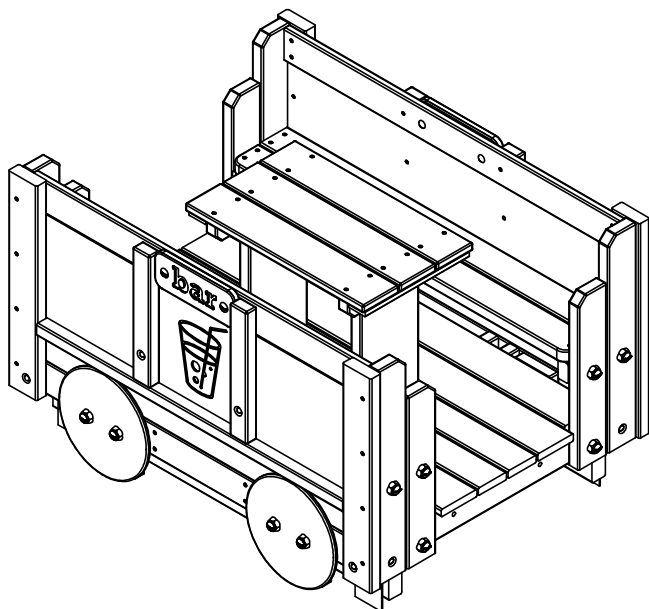


VALHOOGTE / HAUTEUR DE CHUTE /
FALL HEIGHT / FALLHÖHE/
ALTURA DE CAÍDA / ALTEZZA DI CADUTA

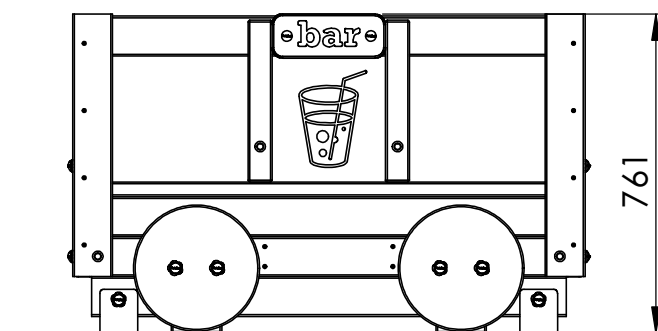

VEILIGHEIDSAFSTAND / ESPACE DE CHUTE / SAFETY AREA /
SICHERHEITSAFSTAND / ZONA DE SEGURIDAD / DISTANZA DI SICUREZZA

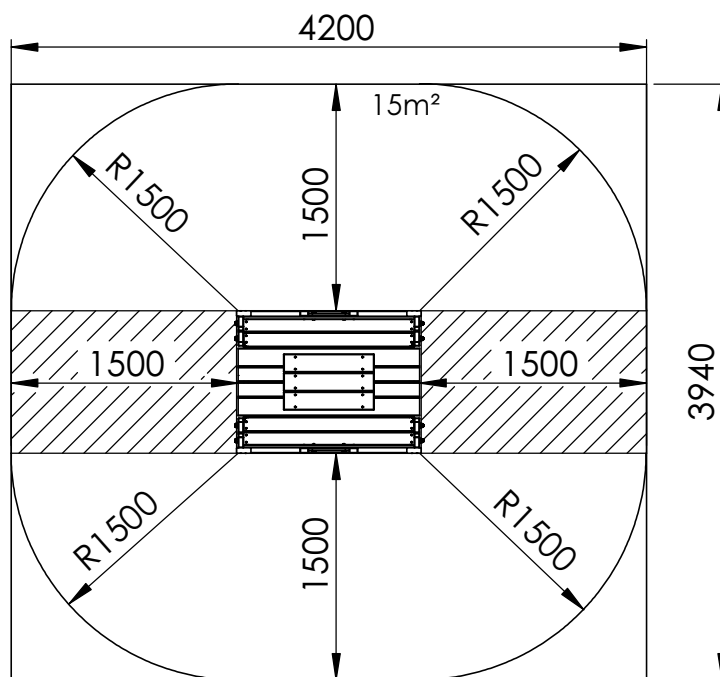

AFMETINGEN
DIMENSIONS
MASSE
DIMENSIONES
DIMENSIONI
L: 1.20m
Br: 0.90m
H: 0.76m




Samenvoegingszone T101/T102+T201/T202+T300+(T500)
Zone de liaison T101/T102+T201/T202+T300+(T500)
Verbindungszone T101/T102+T201/T202+T300+(T500)
Linking zone T101/T102+T201/T202+T300+(T500)
Zona de conexión T101/T102+T201/T202+T300+(T500)
Zona di allineamento T101/T102+T201/T202+T300+(T500)

17m2

Benodigdheden - Liste des pièces - Materials - Benötigtes - Accesorios - Requisiti


1x T400-Eetwagon

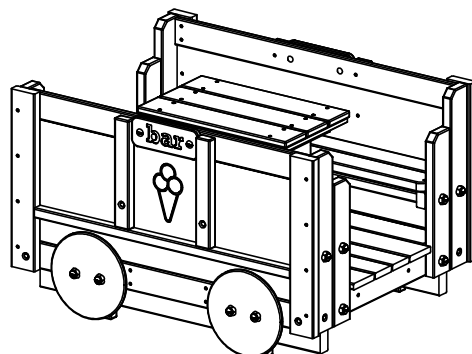


75kg

T400-A

4x White




4x M8x35



4x M8



4x Lb-M-Anker-01

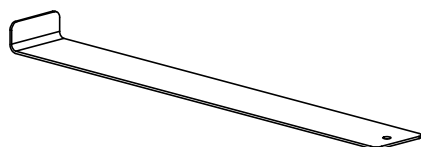


685x90x40

±1.49kg


T400-B

4x White



4x M8x35

4x M8x60




4x M8



4x Ø10x50





4x T101-M-Anker-01



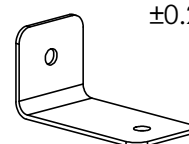


±0.23kg




113x60x60

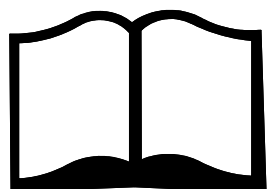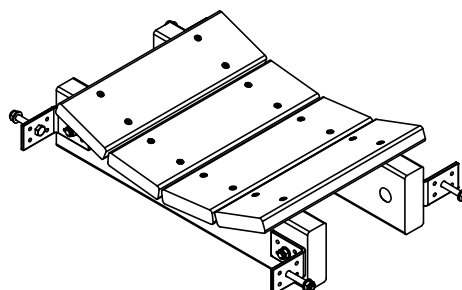**T500**

/A

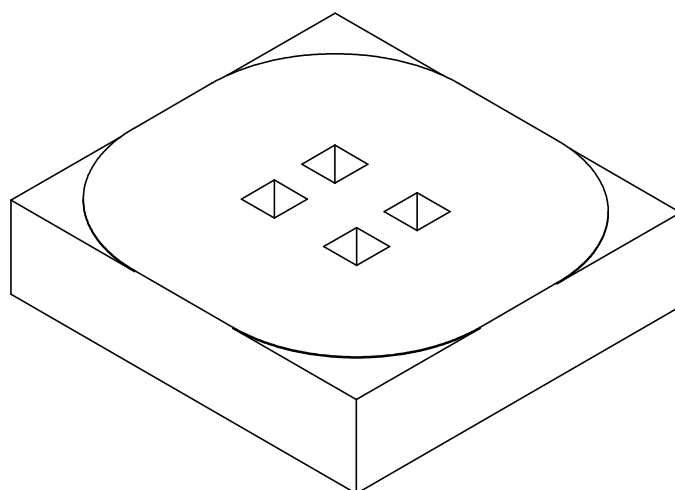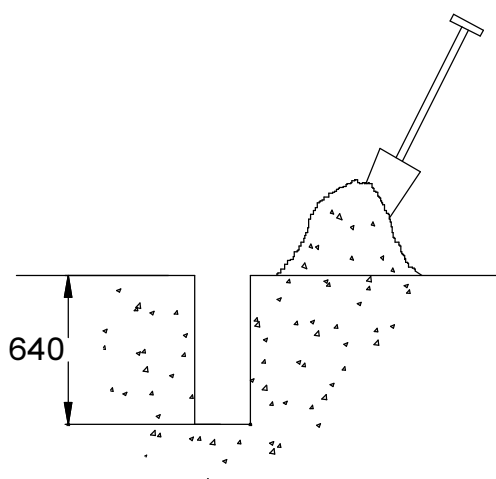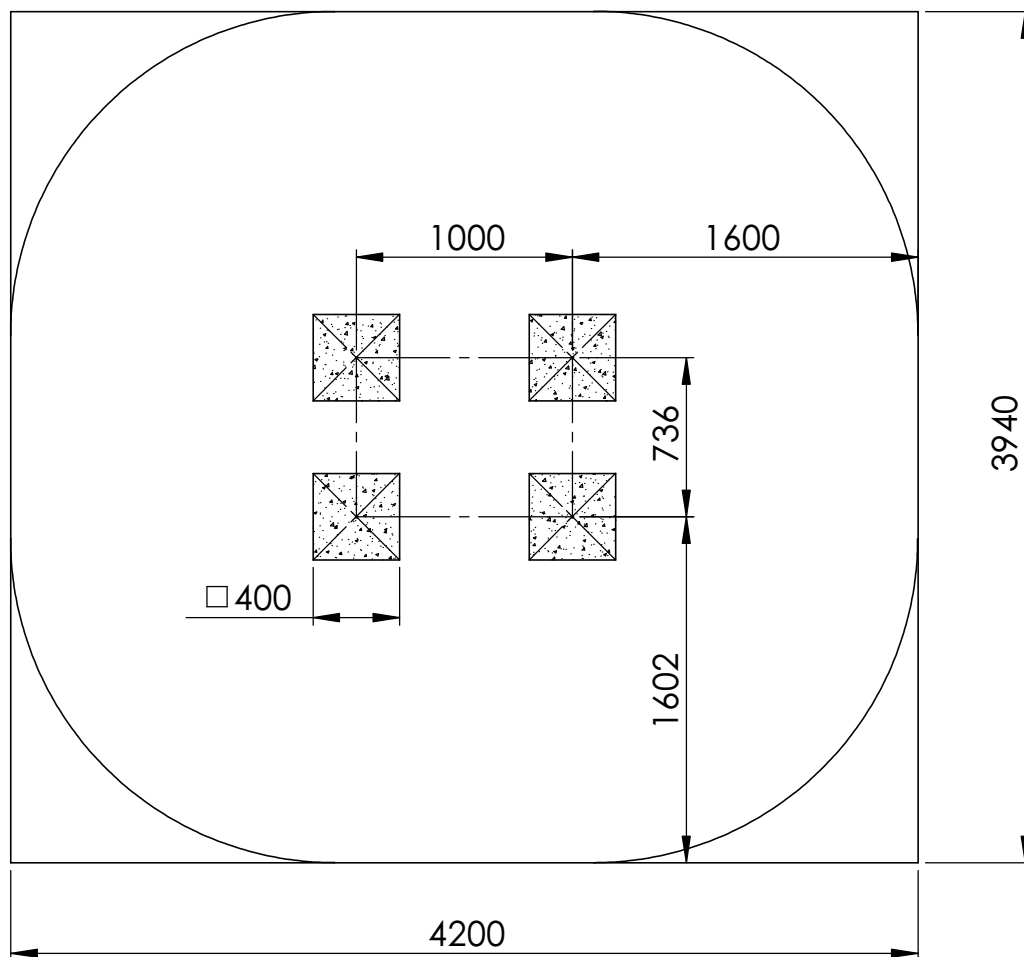


/A.1

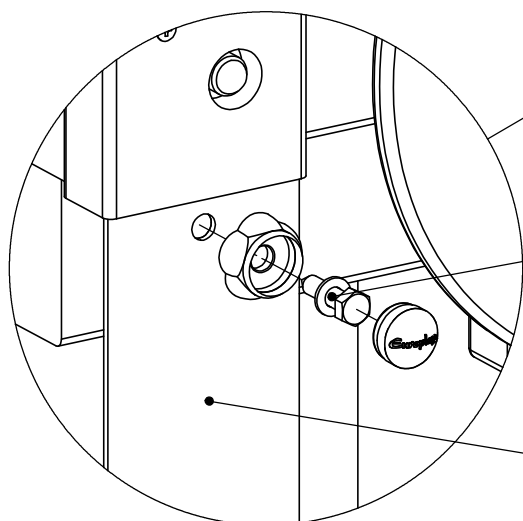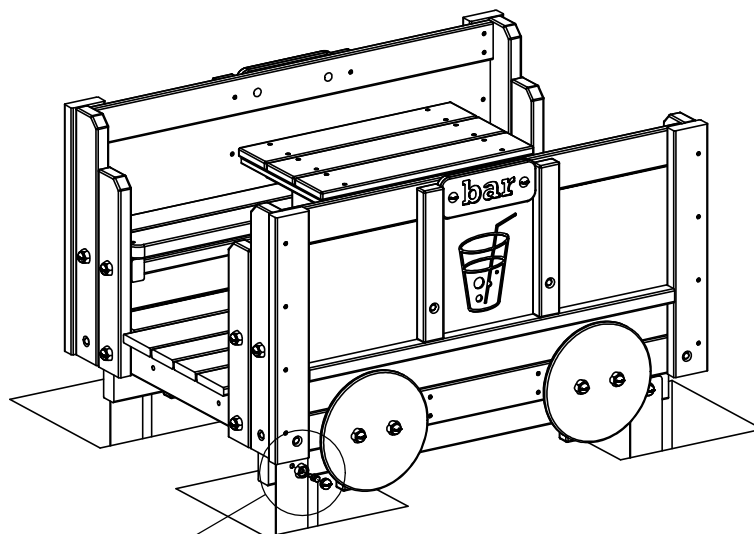
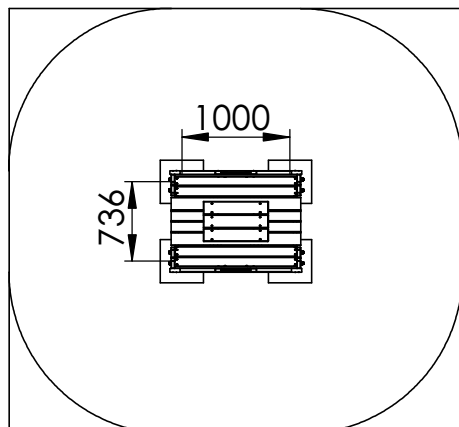


Lb-M-Anker-01
4x


M8x35
4x





/A.2

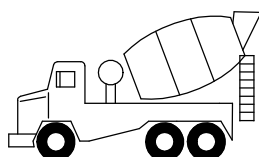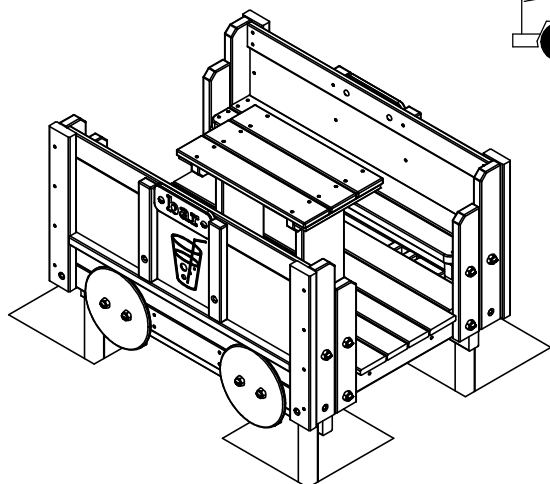







= 0.22m³

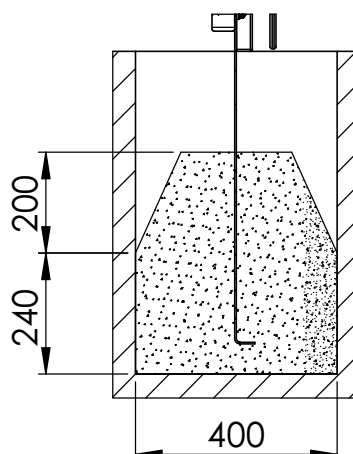


/A.3

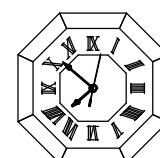

72h

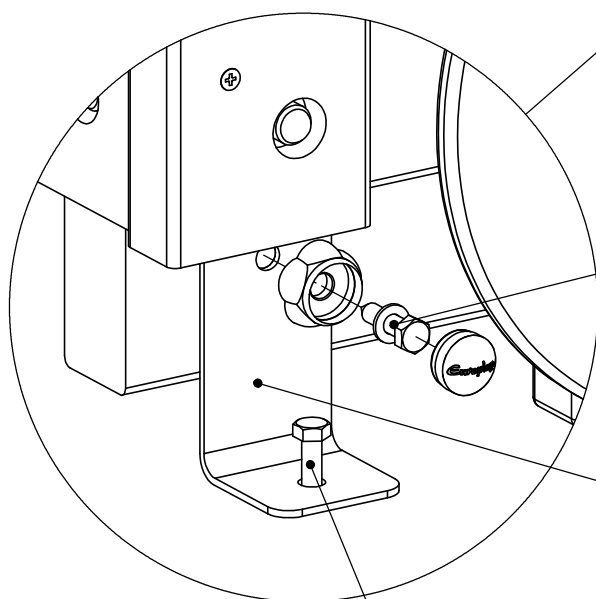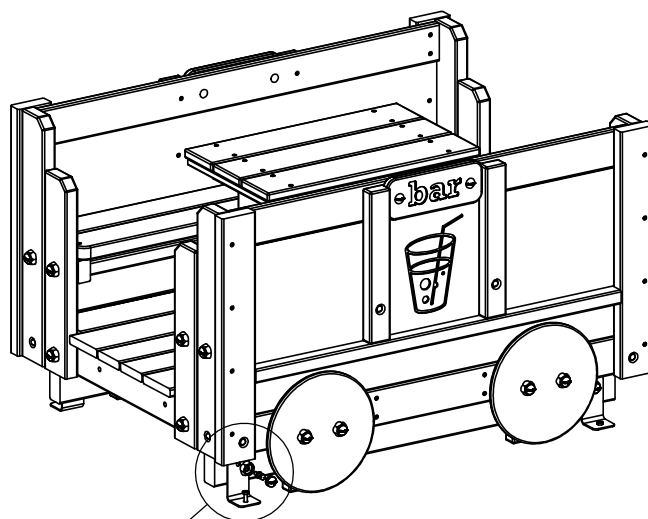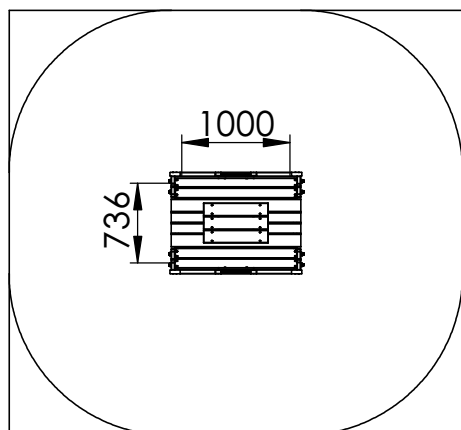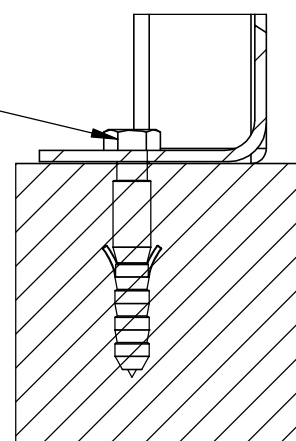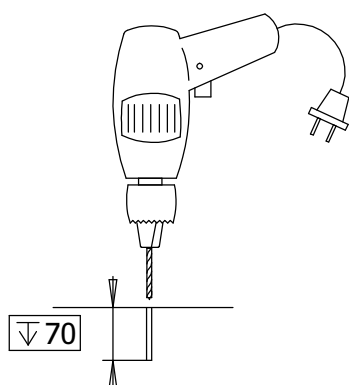
/BM8x35
4xT101-M-Anker-01
4xM8x60
4xØ10x50
4x


COMBINATIE / COMBINAISON / COMBINATION /
KOMBINATION / COMBINACIÓN / COMBINAZIONE

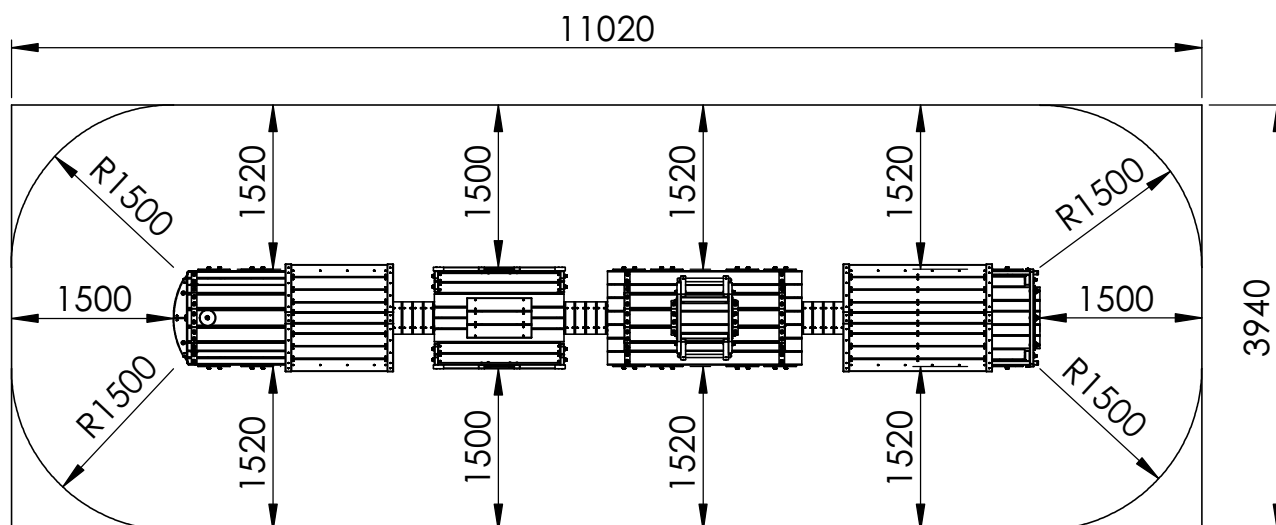

VOORBEELD / EXEMPLE / EXAMPLE /
BEISPIEL / EJEMPLO / ESEMPIO

T101	T400	T300	T201
	T300	T400	

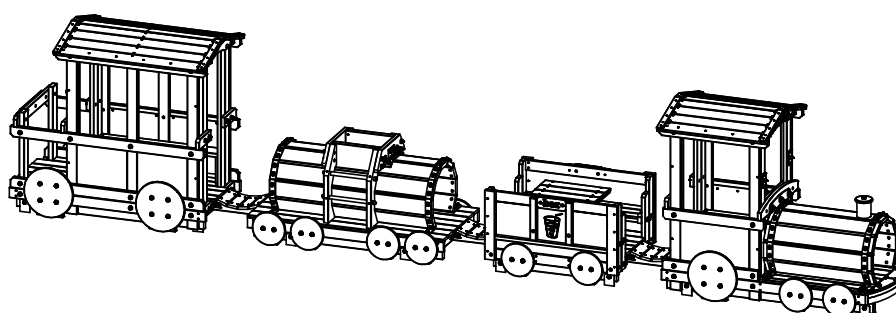

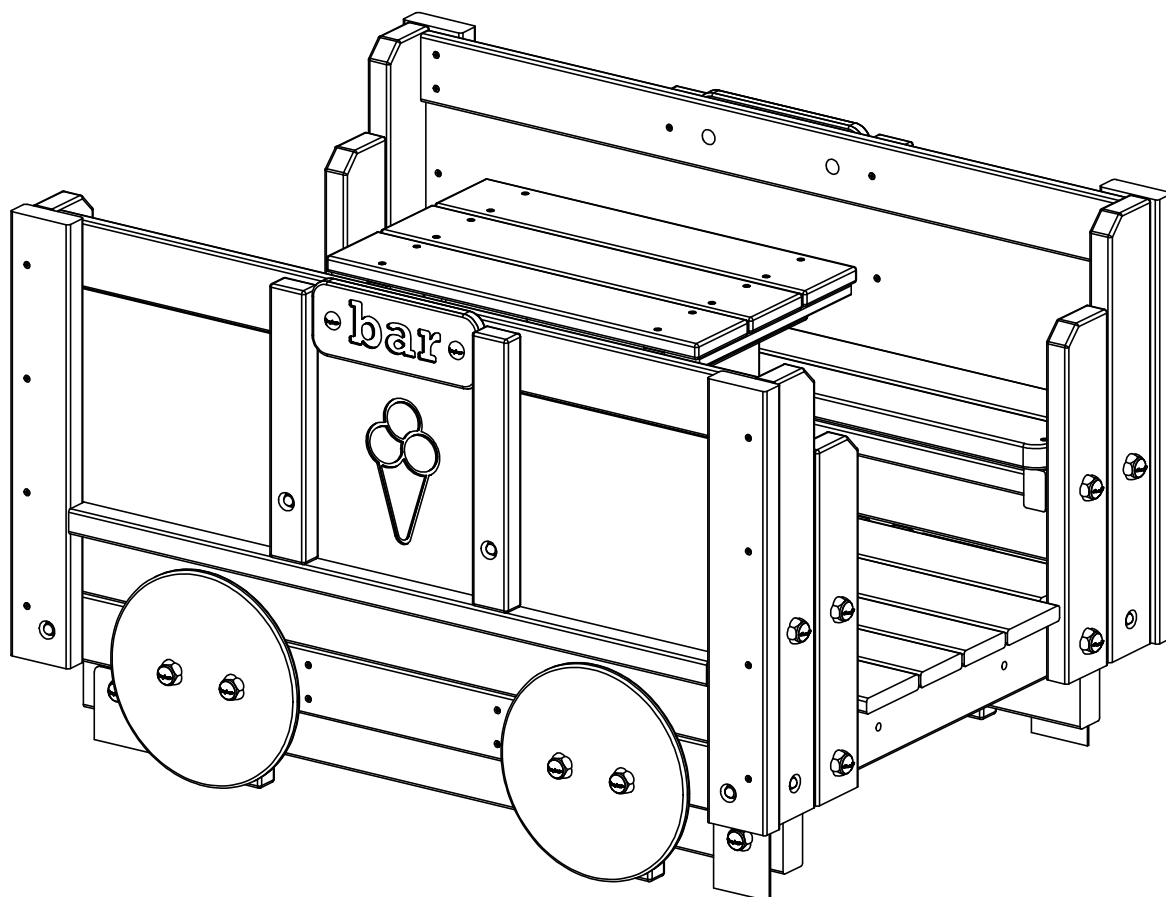

Bij droog weer moeten alle bouten en schroeven opnieuw aangespannen worden.
Par temps sec il faut resserrer régulièrement toute la visserie.
By dry and warm weather check the tightness of all bolts and screws.
Bei trockenem Wetter müssen alle Schrauben und Bolzen aufs neue angespannt werden.
Para el tiempo seco, se necesita cerrar o ajustar los tornillos y tuercas.
Con tempo asciutto, tutti i bulloni e le viti devono essere avvitati nuovamente.