

U300

KRAAIENEST
NID DE CORNEILLE
KRÄHENNEST
CROW'S NEST
NIDO DE CUERVOS
POSTO DI VEDETTA

Montagehandleiding Notice de montage Installation manual Montageanleitung Instrucciones para el montaje Istruzioni di installazione

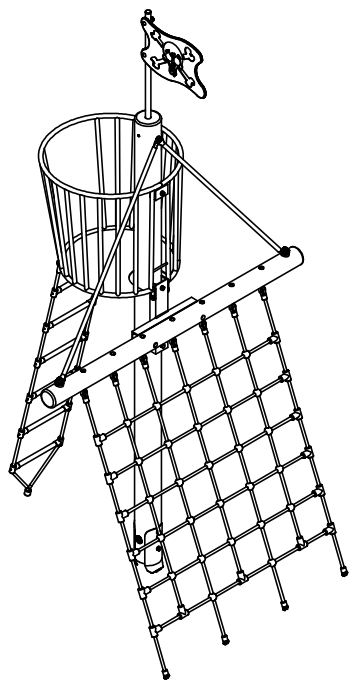
Leeftijd
Age group
Age / Alter
Edad / Età
6 - 12

EUROPLAY nv
Eegene 9
B-9200 DENDERMONDE
tel. 32.52.22 66 22
fax.32.52.22 67 22
www.europlay.eu

Dat.: 26/08/2022


Rev.: -

Page: 1/7




±160kg

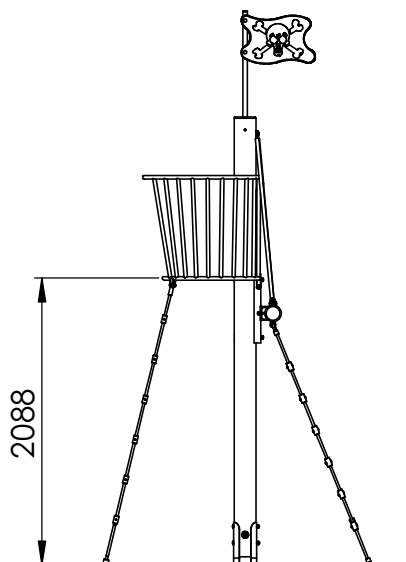VALHOOGTE / HAUTEUR DE CHUTE /
FALL HEIGHT / FALLHÖHE/
ALTURA DE CAÍDA / ALTEZZA DI CADUTA


















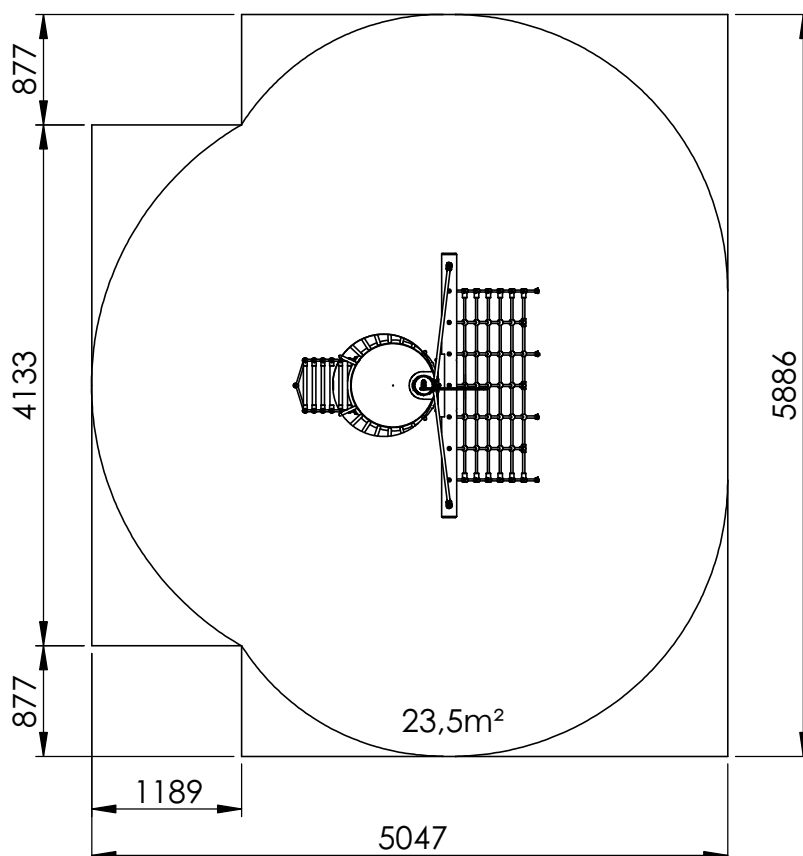
VEILIGHEIDSAFSTAND / ESPACE DE CHUTE / SAFETY AREA /
SICHERHEITSAFSTAND / ZONA DE SEGURIDAD / DISTANZA DI SICUREZZA





AFMETINGEN
DIMENSIONS
MASSE
DIMENSIONES
DIMENSIONI
L: 2,1m
Br: 2,0m
H: 4,1m




28m²

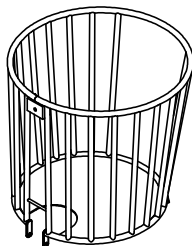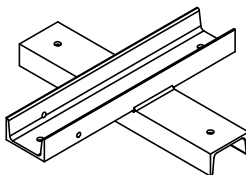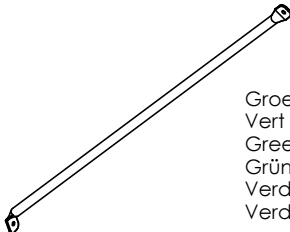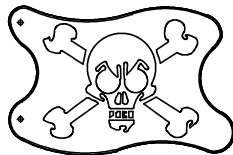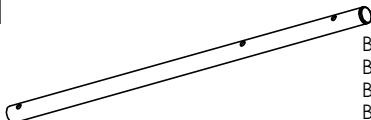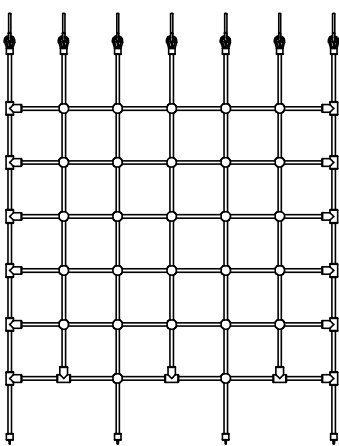


Benodigdheden - Liste des pièces - Materials - Benötigtes - Accesorios - Requisiti





1x U300-H-KR45-01		1x Lb-M-Schelp16-01	
			
3200 x Ø160		36.51kg	
1x S211-H-KR21-01			
			
2100x Ø 100		13.40kg Ø 160	
1x U200-M-Mand-01	1x S211-M-VerbindingNest-01	2x S211-M-Steunbaar-01	
			
Groen Vert Green Grün Verde Verde	Groen Vert Green Grün Verde Verde	Groen Vert Green Grün Verde Verde	
862 x 862 x 823	36.37kg	500 x 500 x 100	10.22kg
		1591 x 52 x 40	2.36kg
1x U200-K-Vlag-01		2x M10	
			
1578x1039x12		1x M10x80	
1.48kg			
1x S440-As-VlagPaal-01		4x	
			
895 x Ø33,7		Ø32x Ø11	
2.15kg		Wit White Blanc Weiß Bianco Bianco	
		2x M10x70	
			
1x S550-As-NetBas-01		1x S550-H-H-01	
			
2004 x 1547 x 92		1800x130x130	
9.83kg		22.32kg	
		5x S211-As-Ketting-01	
			
		558 x 66 x 40	
		0.37kg	
		5x M10	
			
		7x M10	
			
		7x M10	
			
		7x M10	
			
1x U200-As-NetLad-01		1x S211-H-Anker-01	
			
2271 x 439 x 49		400 x 130 x 130	
3.30kg		4.96kg	

Benodigdheden - Liste des pièces - Materials - Benötigtes - Accesorios - Requisiti


	2x M10x160			2x M8			2x $\phi 50 \times \phi 12$		Blauw Bleu Blue Blau Azul Blu
	2x M12x145								
	2x M12x180								
	3x M12x190								
	1x M10x60			2x M8			2x $\phi 50 \times \phi 12$		Blauw Bleu Blue Blau Azul Blu
				1x M10					
				9x M12					
	2x M8x35			2x M8			2x	 	
	2x M12x25			7x M12					

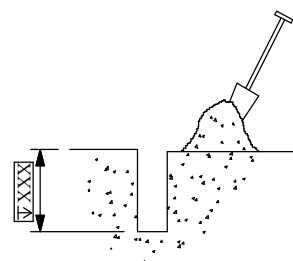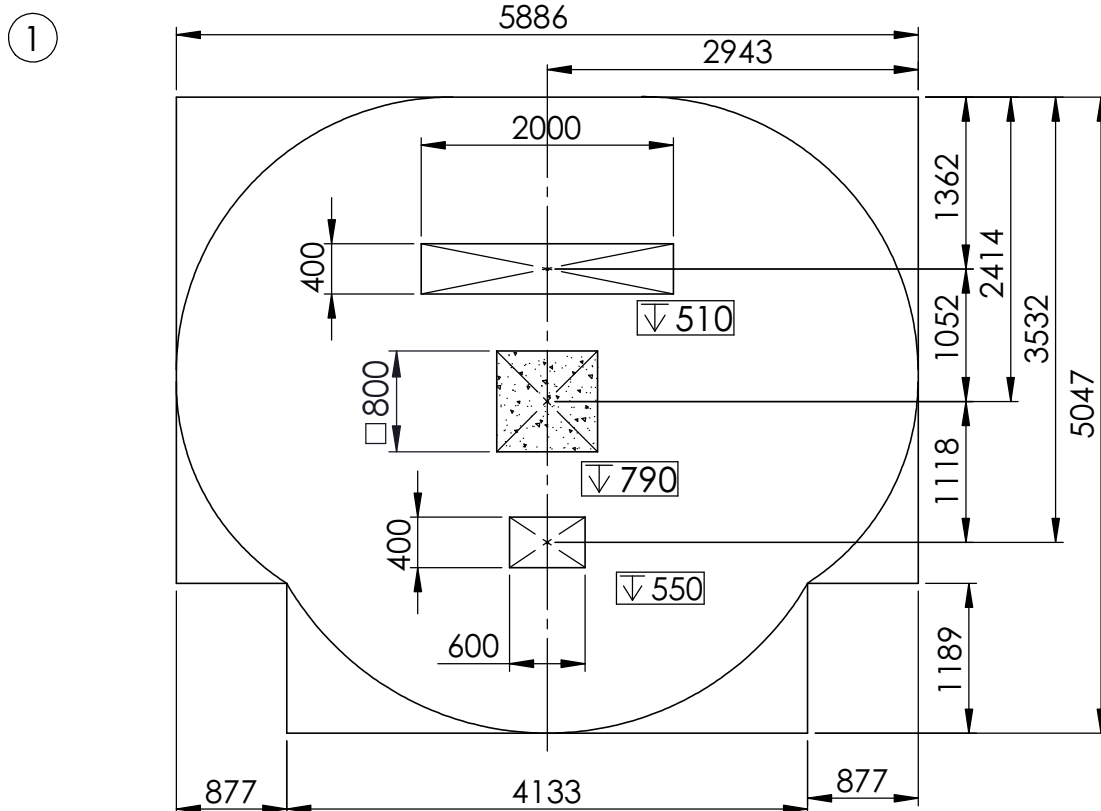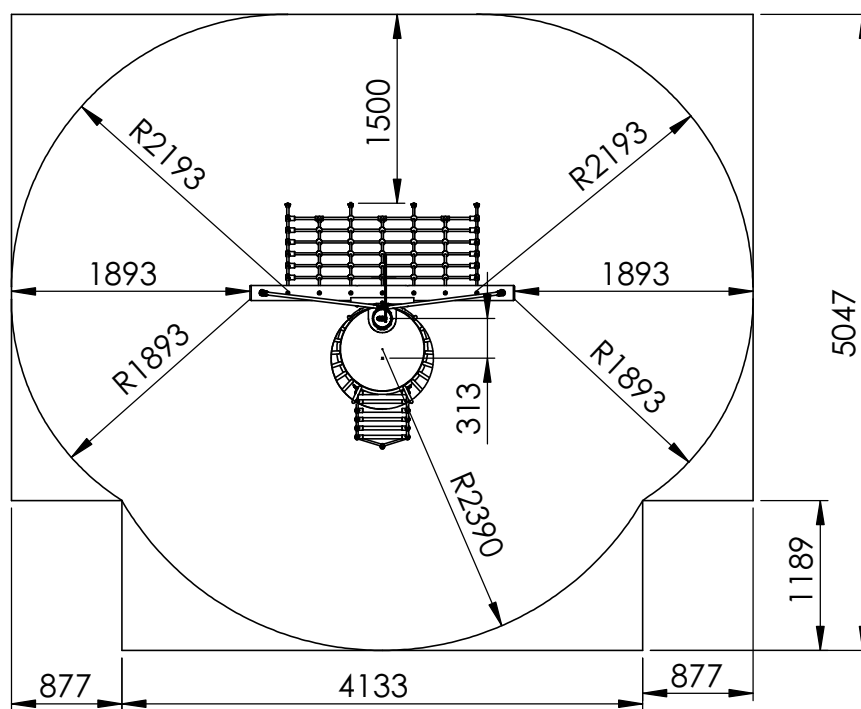


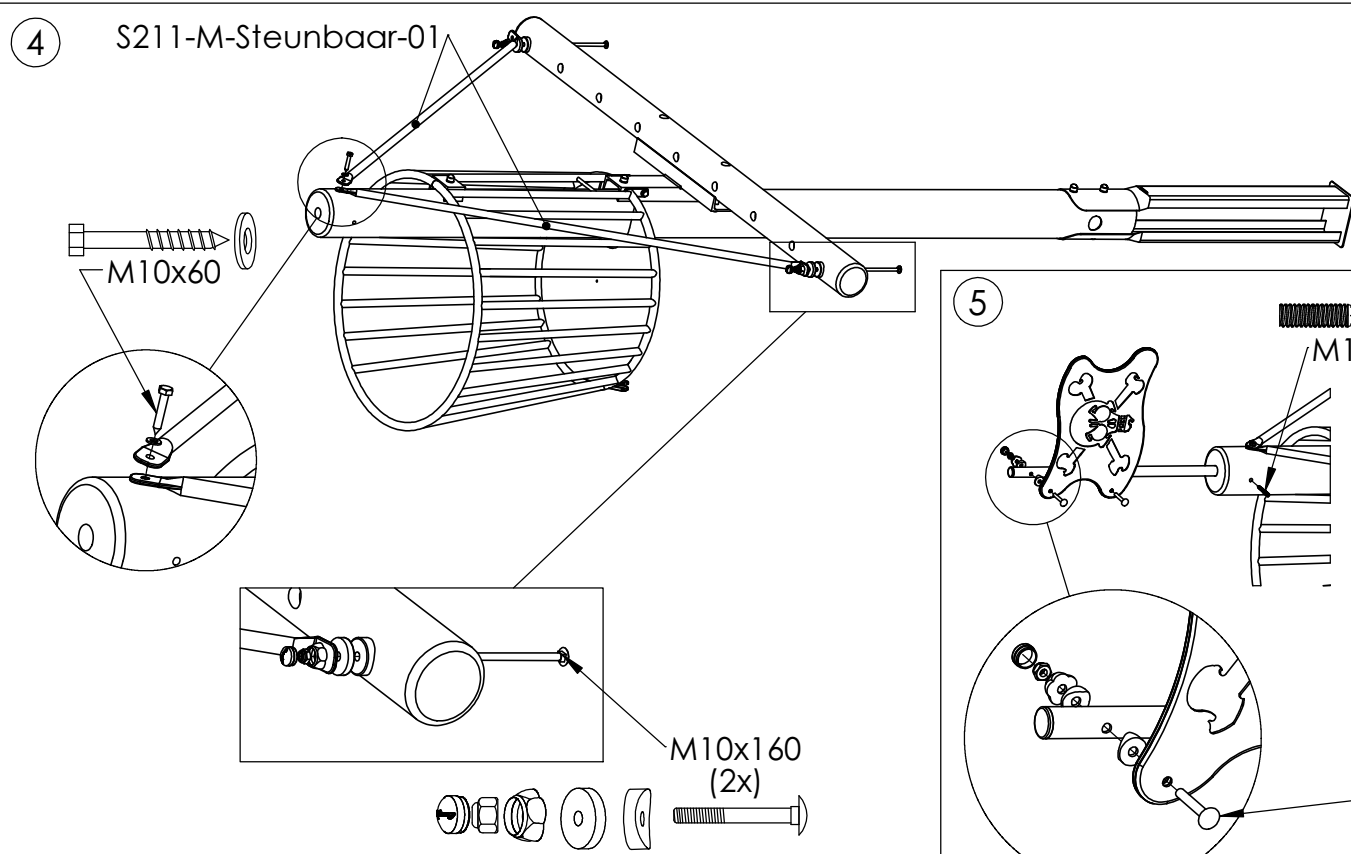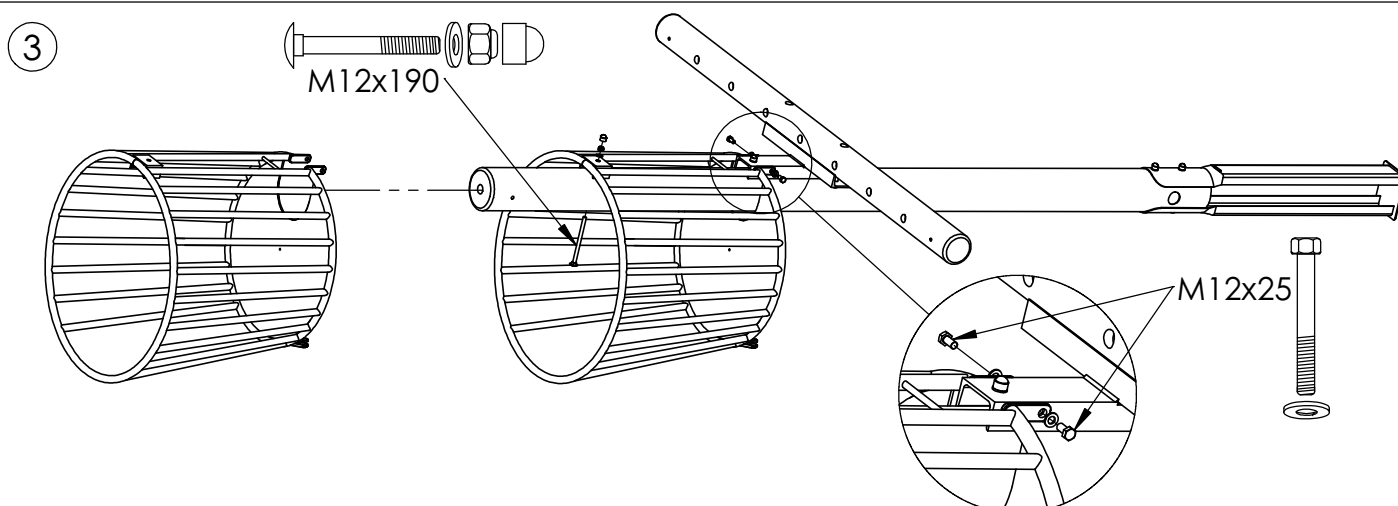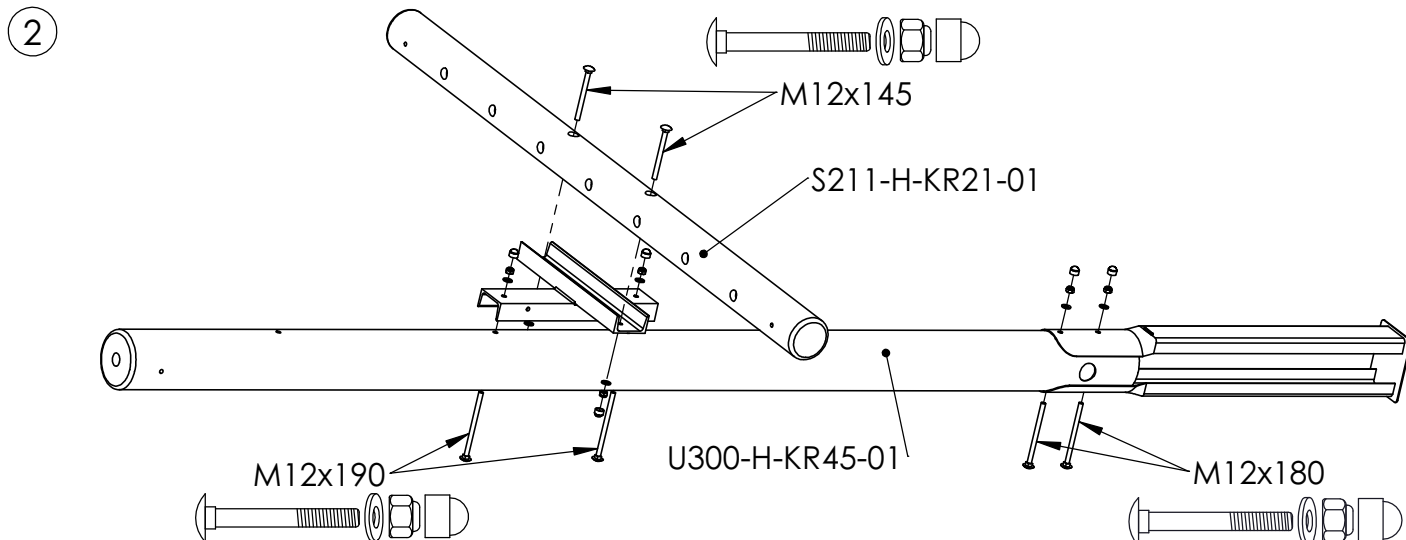

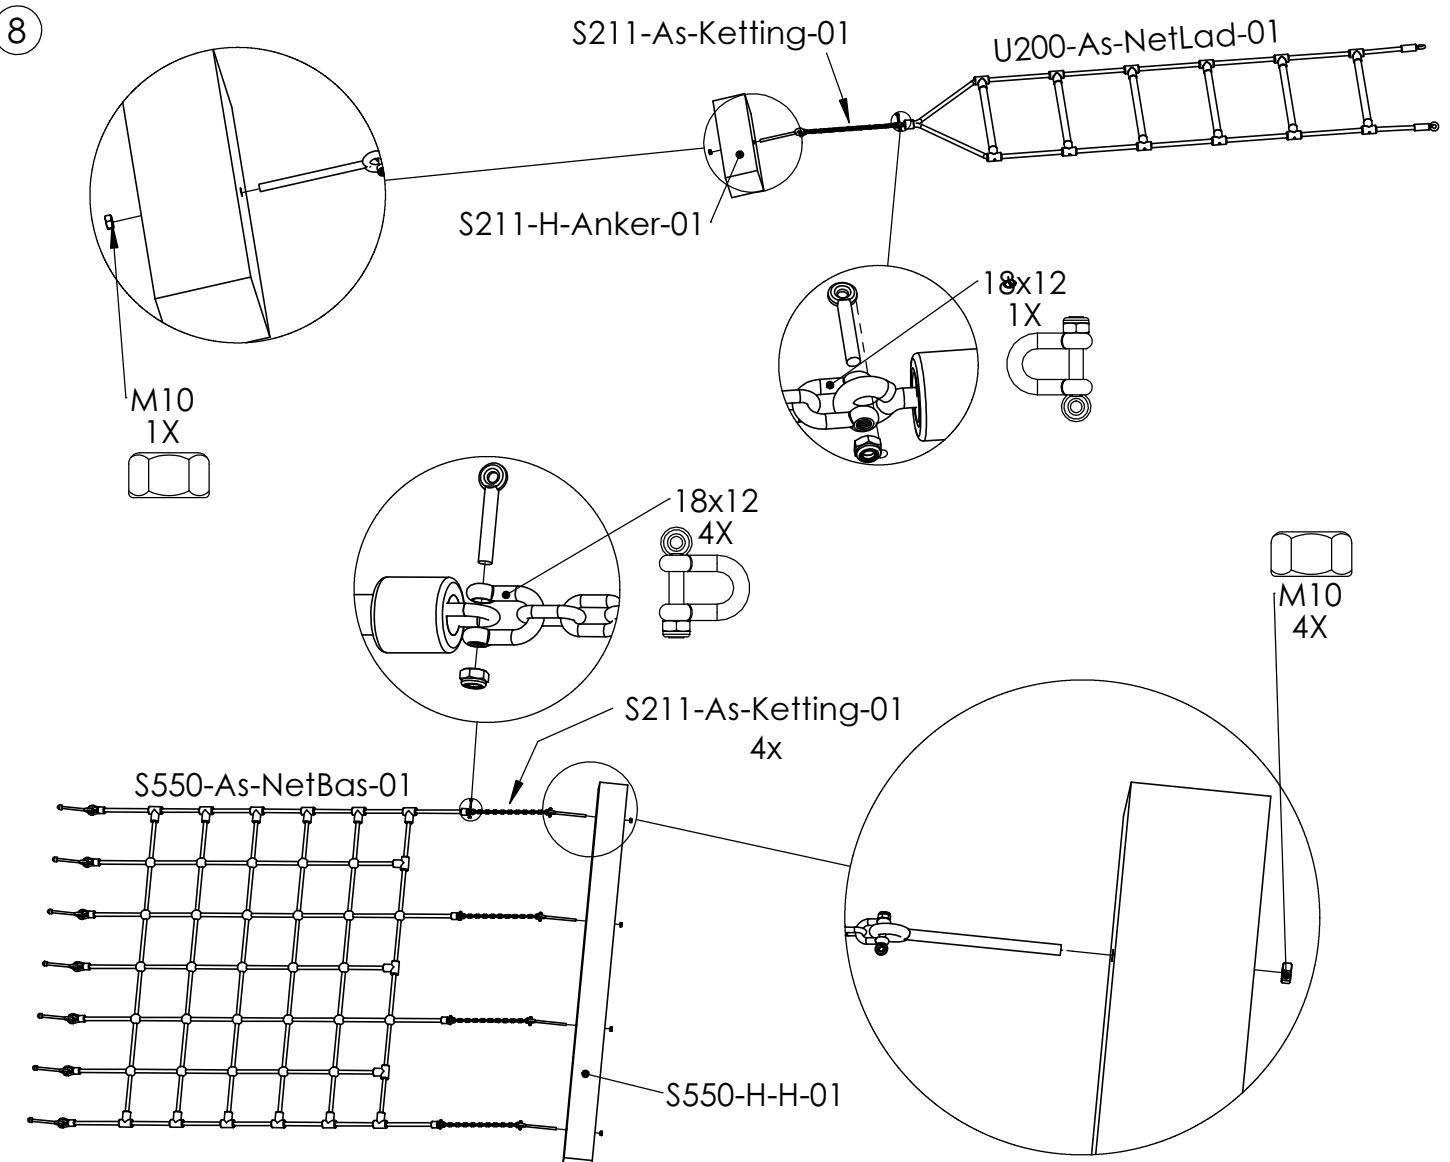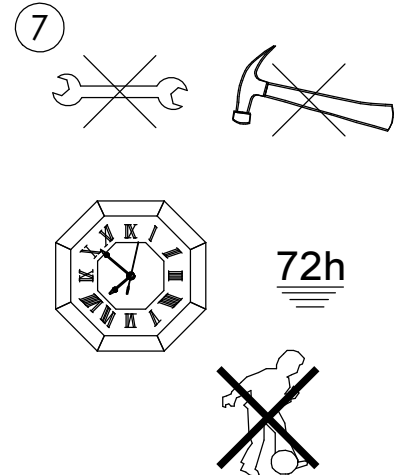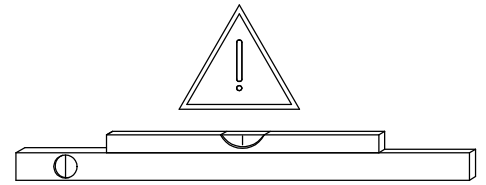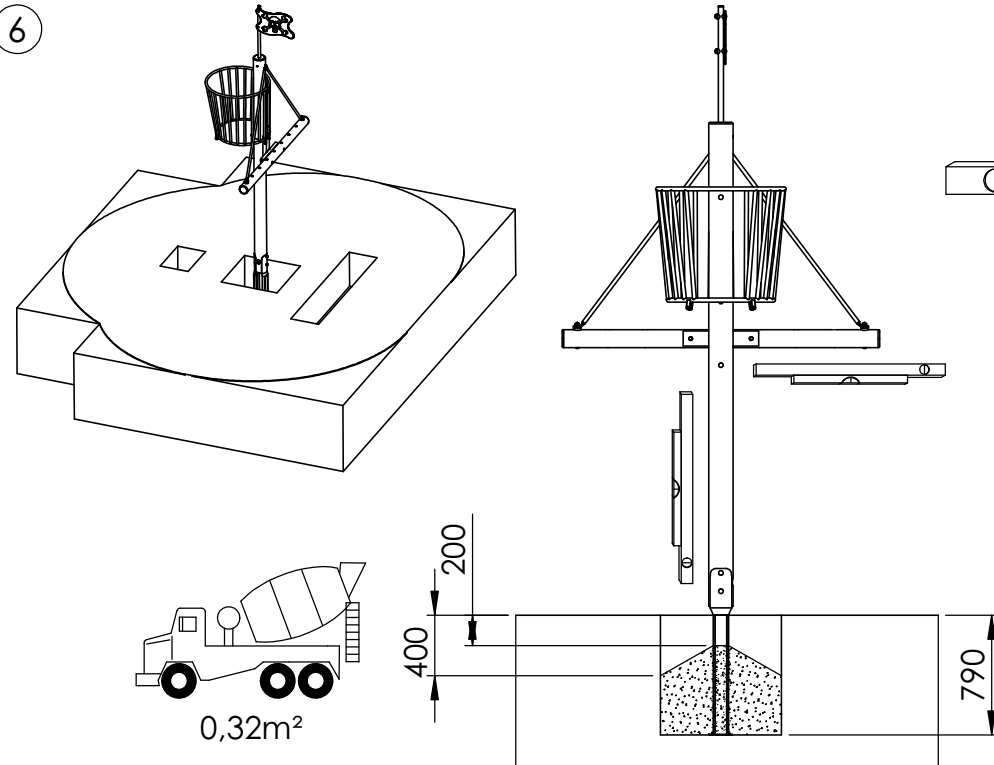

9

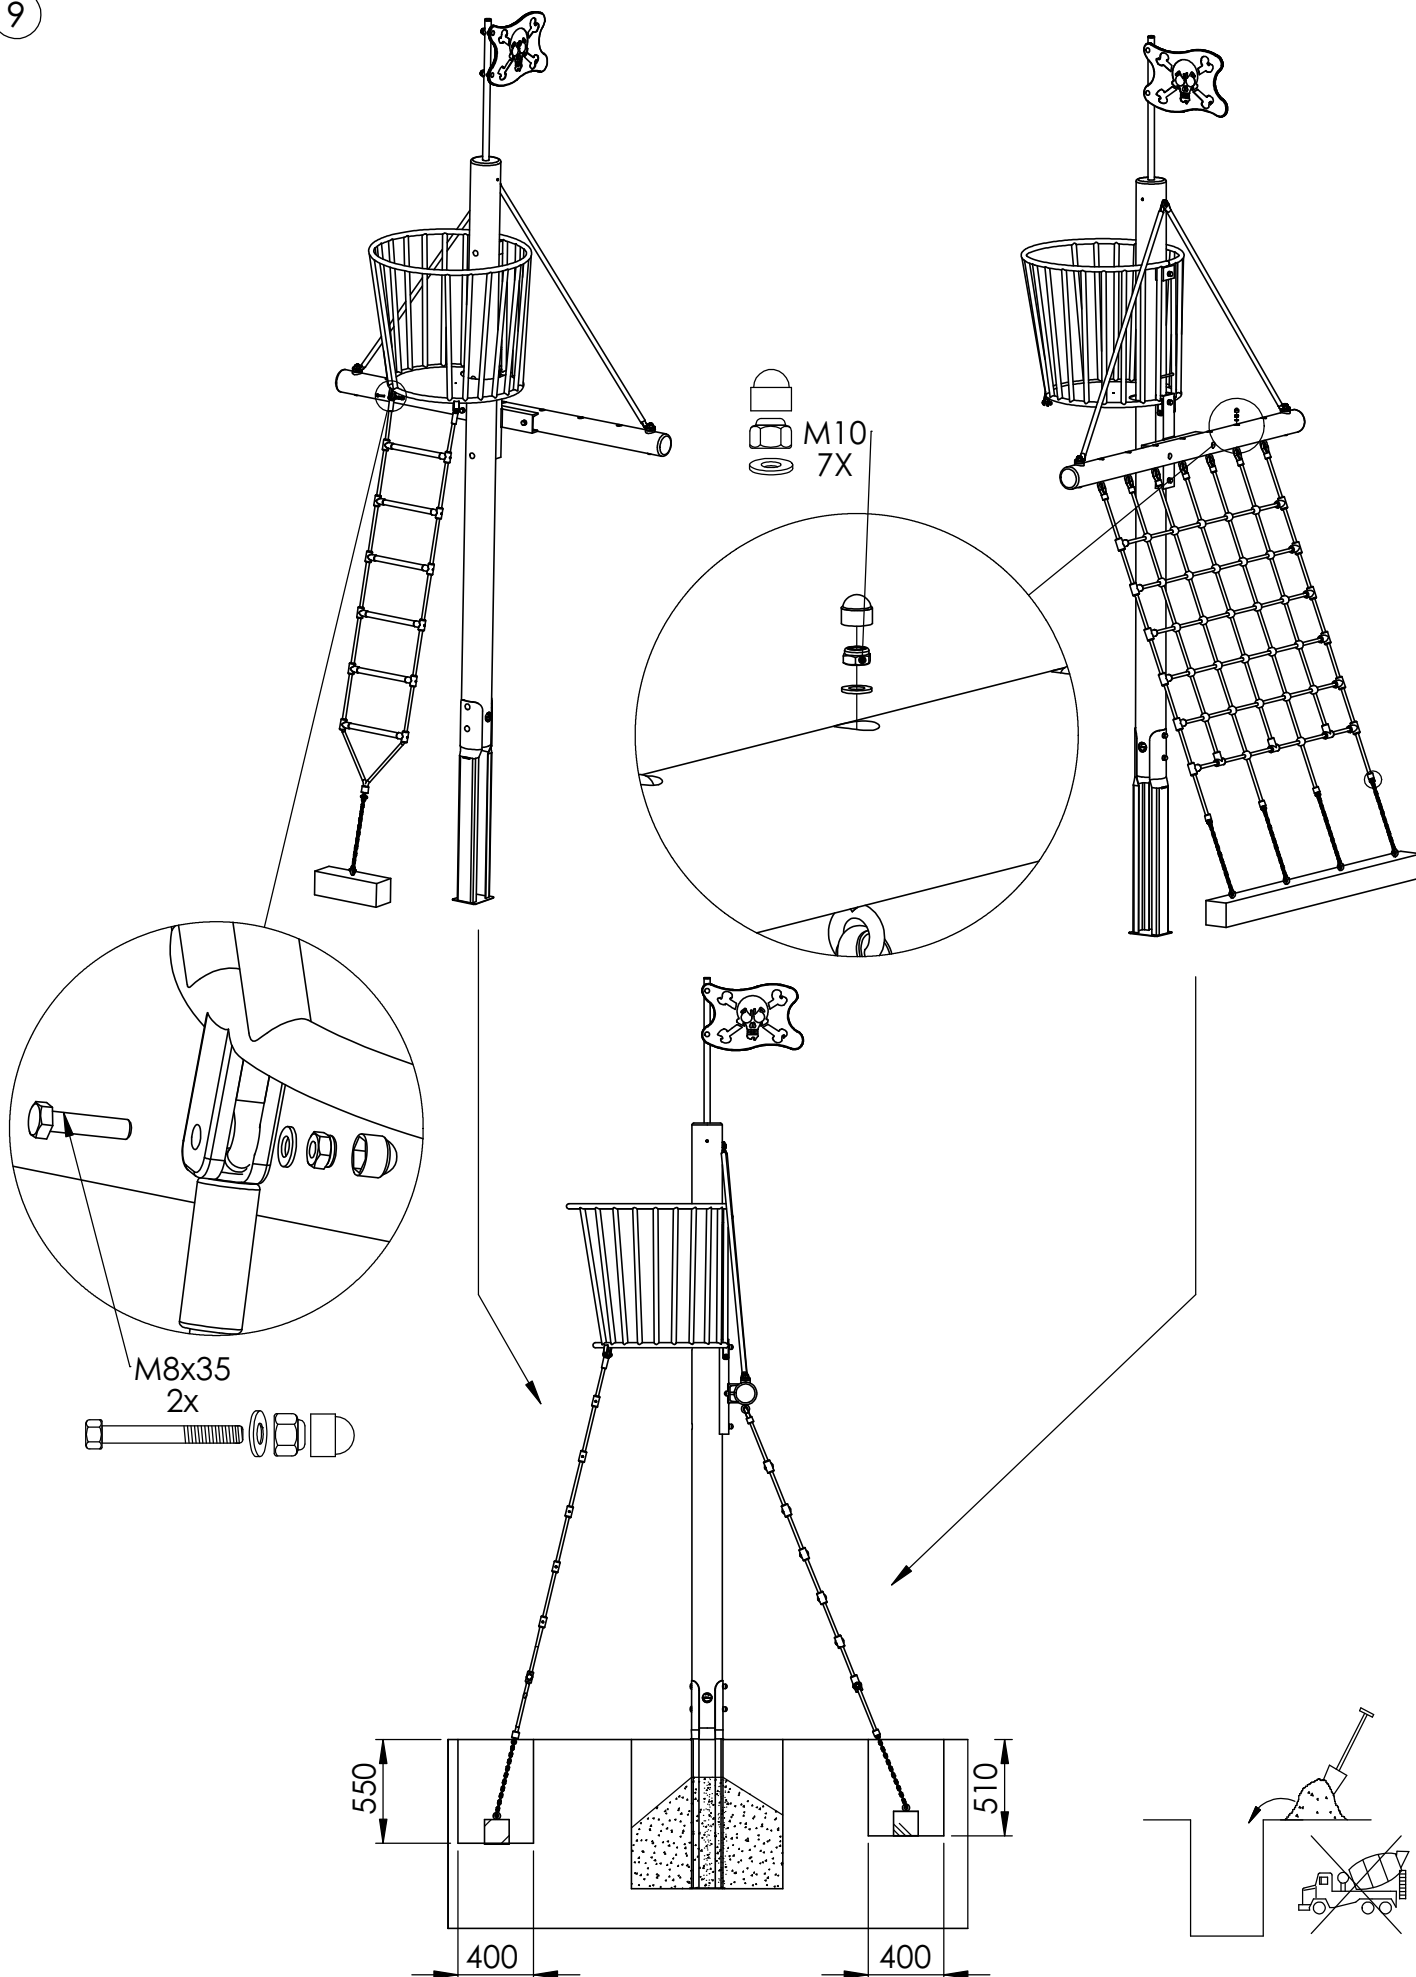

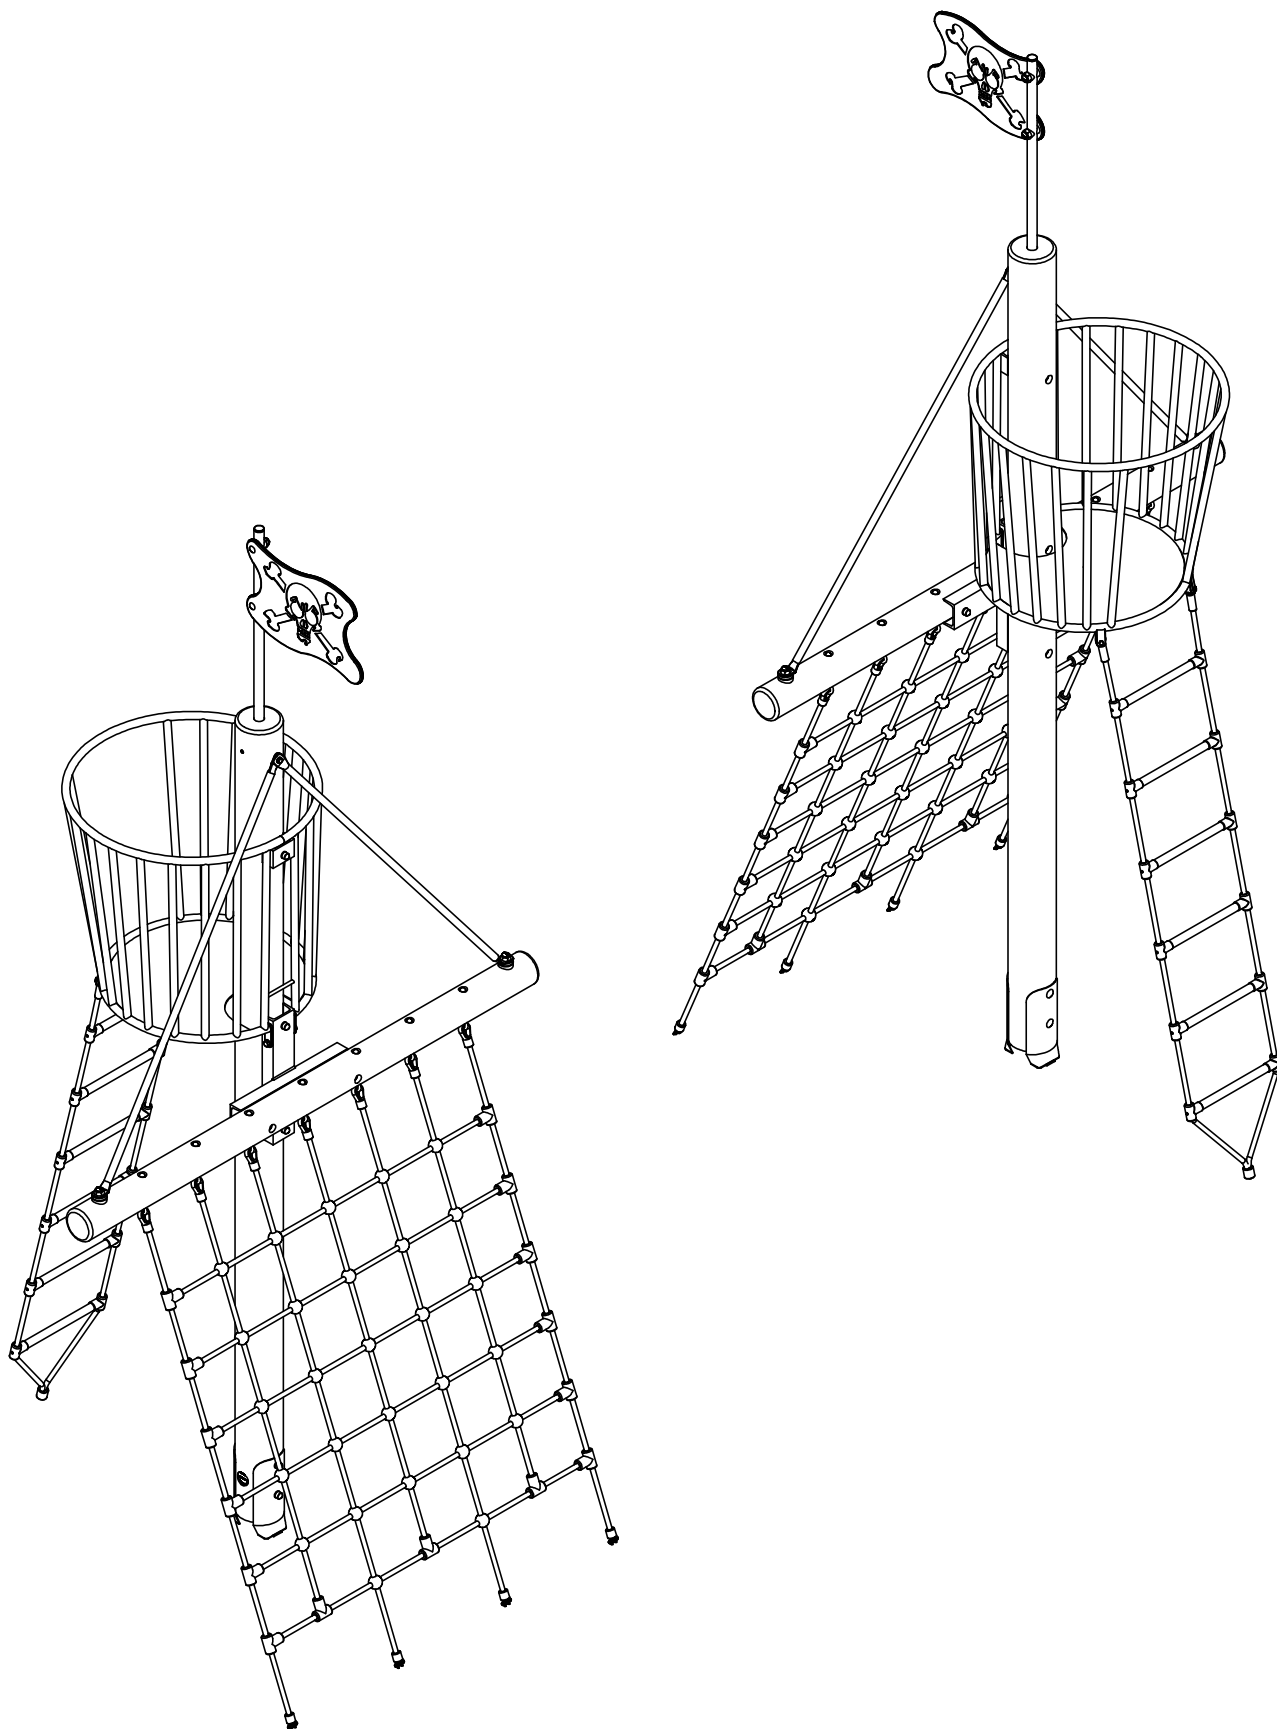

10

Bij droog weer moeten alle bouten en schroeven opnieuw aangespannen worden.
Par temps sec il faut resserrer régulièrement toute la visserie.

By dry and warm weather check the tightness of all bolts and screws.

Bei trockenem Wetter müssen alle Schrauben und Bolzen aufs neue angespannt werden.

Para el tiempo seco, se necesita cerrar o ajustar los tornillos y tuercas.

Con tempo asciutto, tutti i bulloni e le viti devono essere avvitati nuovamente.