

T010 A/B

POLITIEWAGEN
POLICE CAR
VOITURE DE POLICE
POLIZEIAUTO
MACCHINA DELLA POLIZIA
COCHE DE POLICÍA

Montagehandleiding Notice de montage Assembling manual Montageanleitung Instrucciones para el montaje Istruzioni di installazione


Leeftijd: 2-6
Age:
Age group:
Alter:
Edad:
Età:

EUROPLAY nv
Eegene 9
B-9200 DENDERMONDE
tel. 32.52.22 66 22
fax. 32.52.22 67 22
www.europlay.eu


Dat.: 3/03/2016

Page: 1/5


T010-A

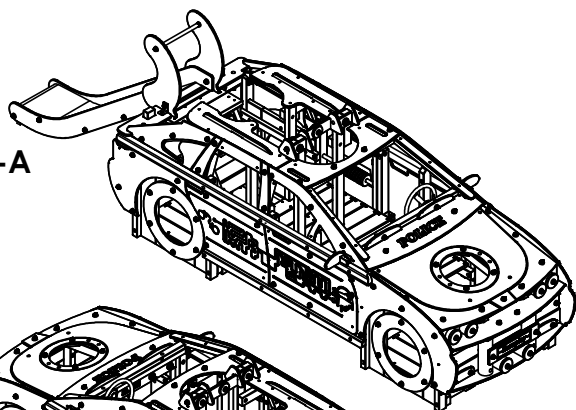


T010-B

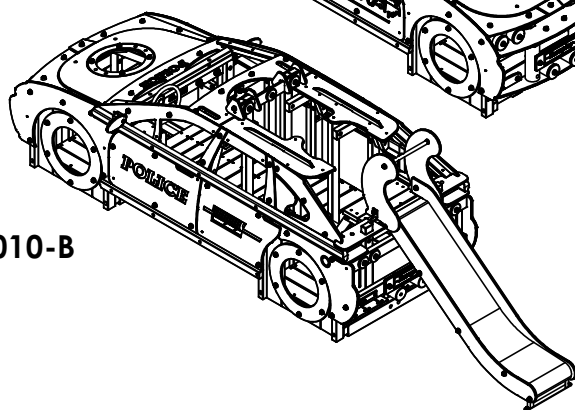

VALHOOGTE / HAUTEUR DE CHUTE /
FALL HEIGHT / FALLHÖHE /
ALTURA DE CAÍDA / ALTEZZA DI CADUTA

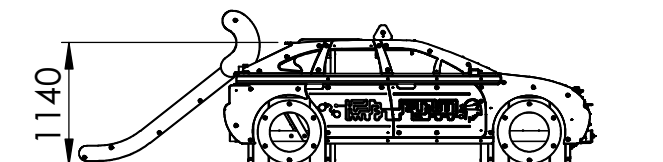






VEILIGHEIDSAFSTAND / ESPACE DE CHUTE / SAFETY AREA /
SICHERHEITSABSTAND / ZONA DE SEGURIDAD / DISTANZA DI SICUREZZA

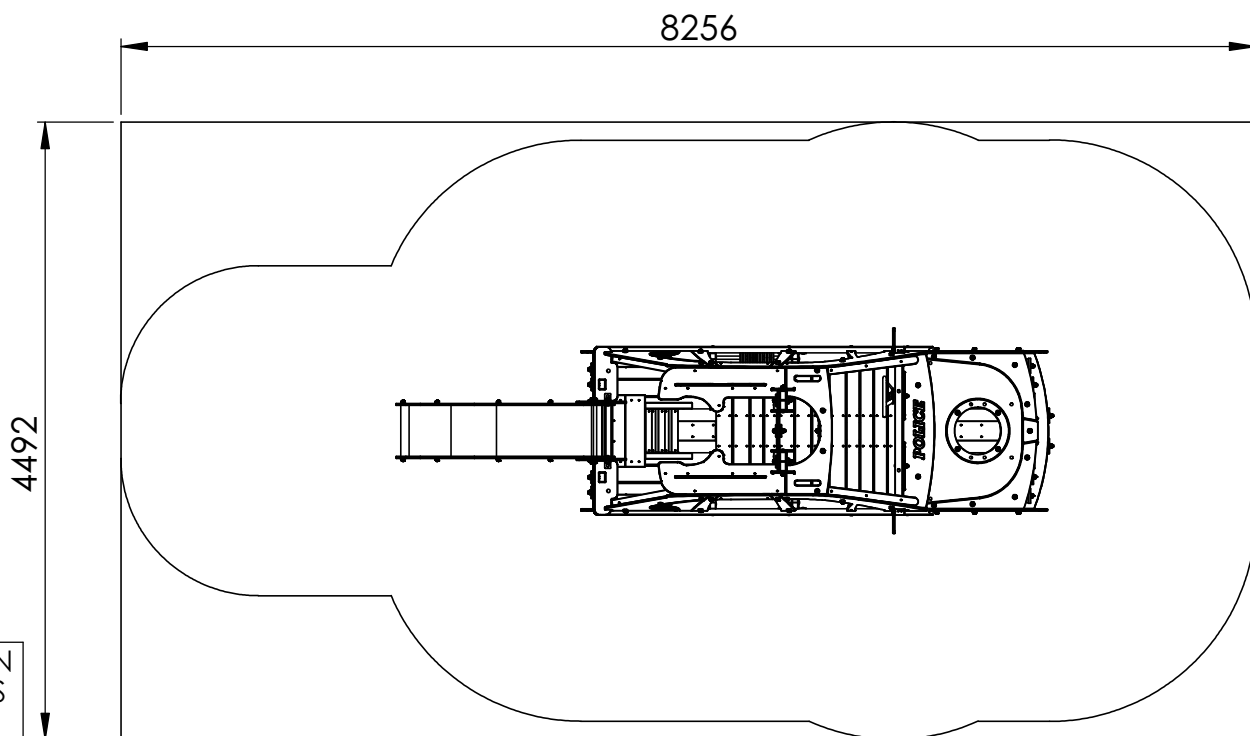




AFMETINGEN
DIMENSIONS
MASSE
DIMENSIONES
DIMENSIONI
L : 4,8m
H : 1,3m
Br : 1,5m


±37m²


Benodigdheden - Liste des pièces - Materials - Benötigtes - Accesorios - Requisiti

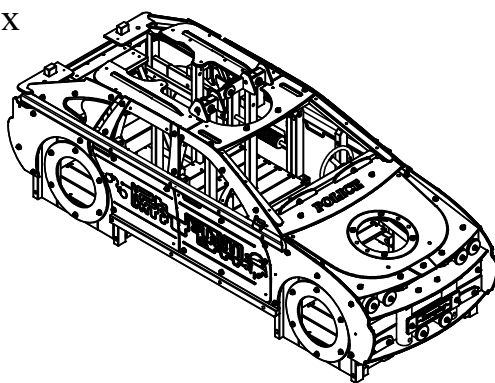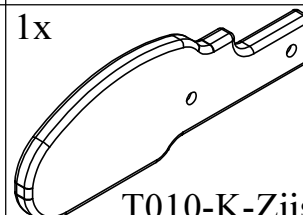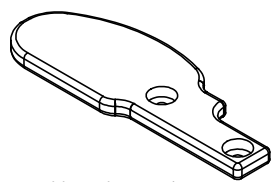1x		$\pm 321\text{kg}$	2x	M8x85	2x		M8	
			2x	M8x105	4x		M8	
			2x	M8x50	4x		M8	
1x			1x			6x		M8
T010-K-Zijspiegel-02			T010-K-Zijspiegel-01					

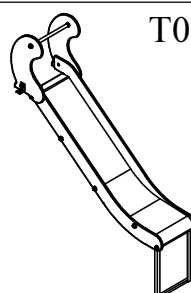
T010-A	
1x	T010-As-InoxGlijb-01 /A
	$\pm 23\text{kg}$

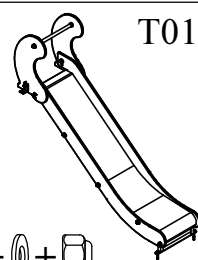T010-B	
1x	T010-As-InoxGlijb-01 /B
	$\pm 22\text{kg}$
 2x M10	

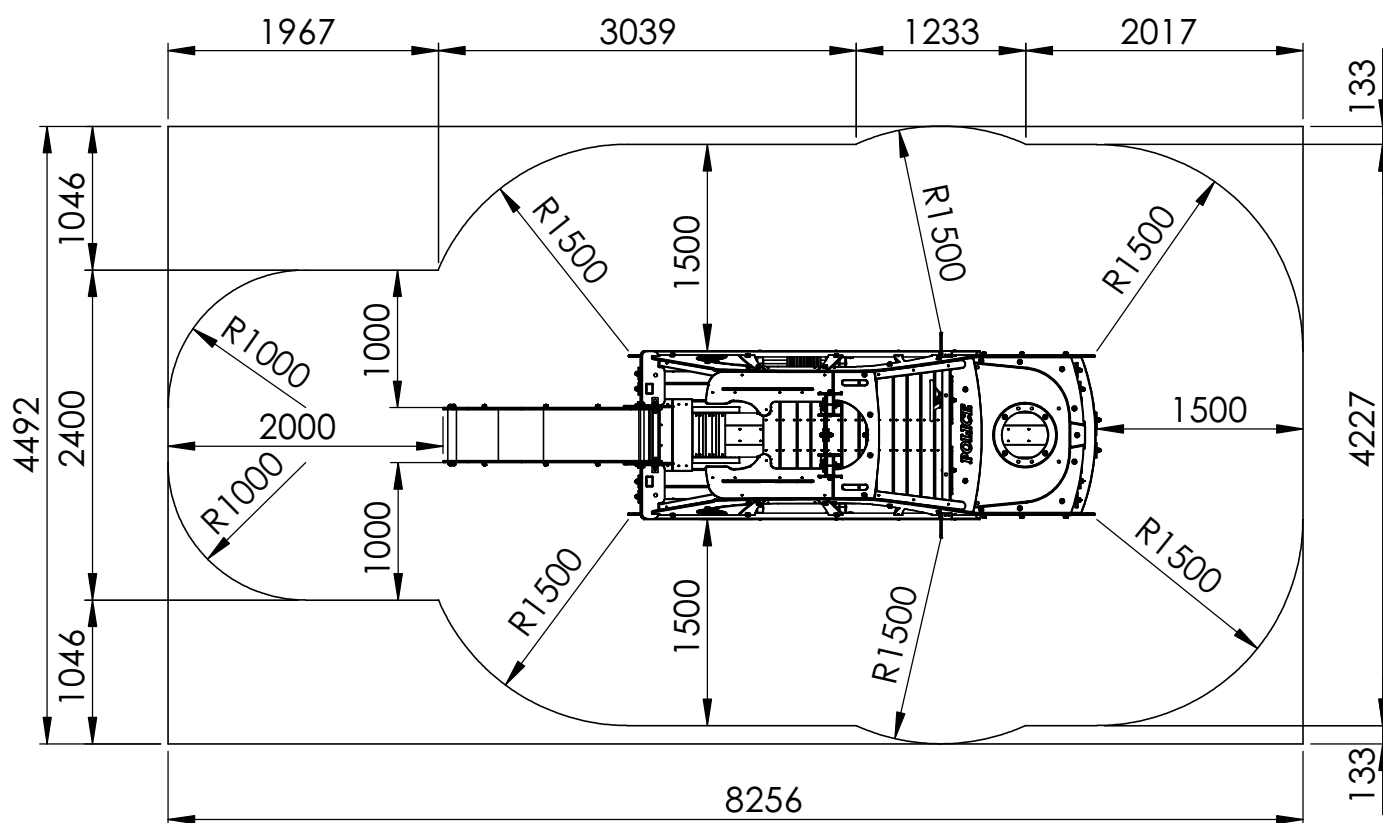


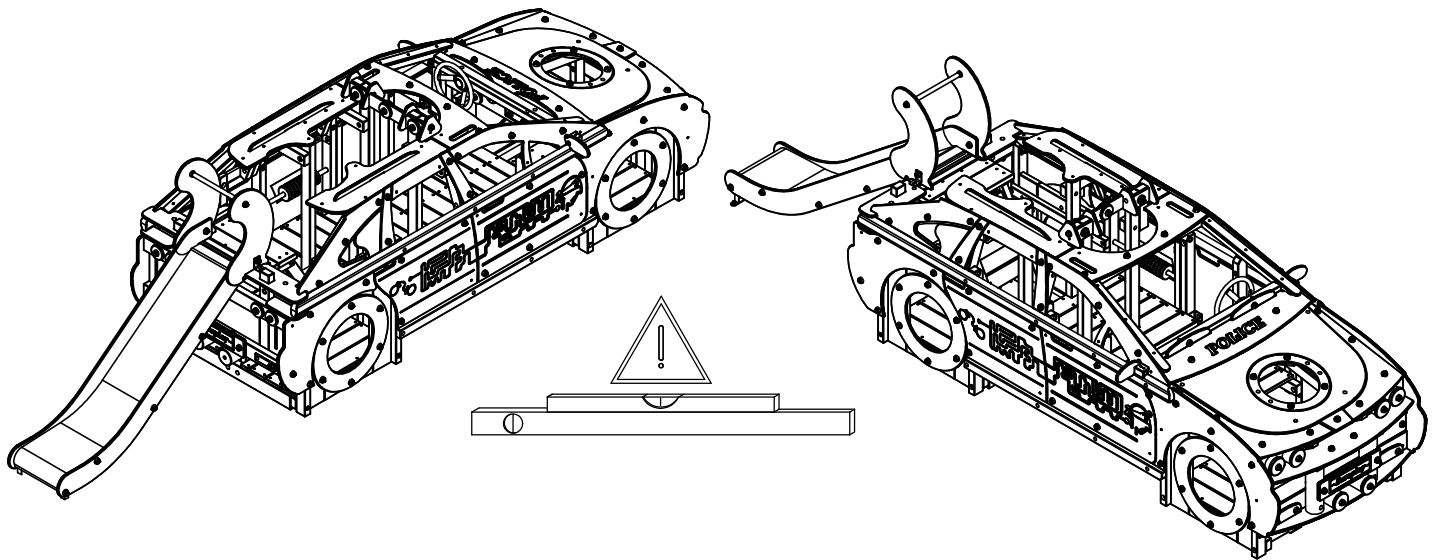



①

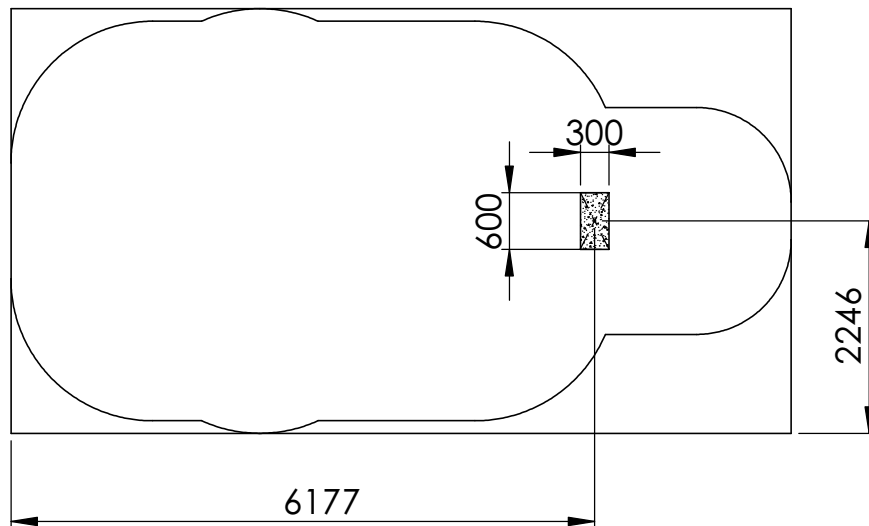


T010-A

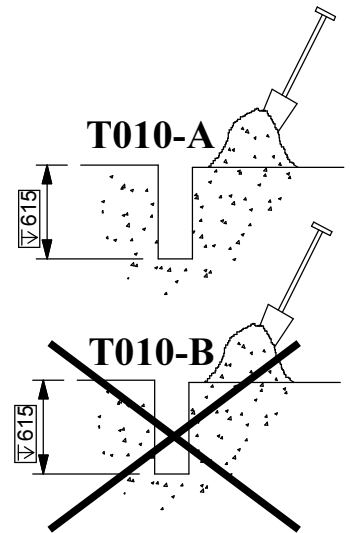


T010-B

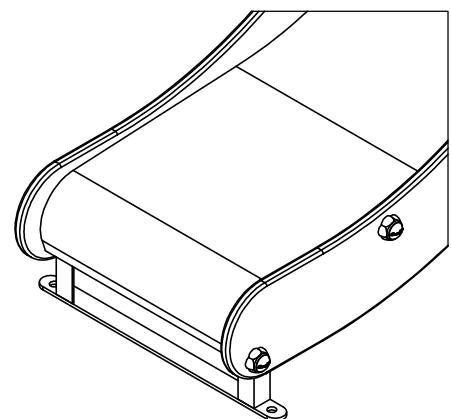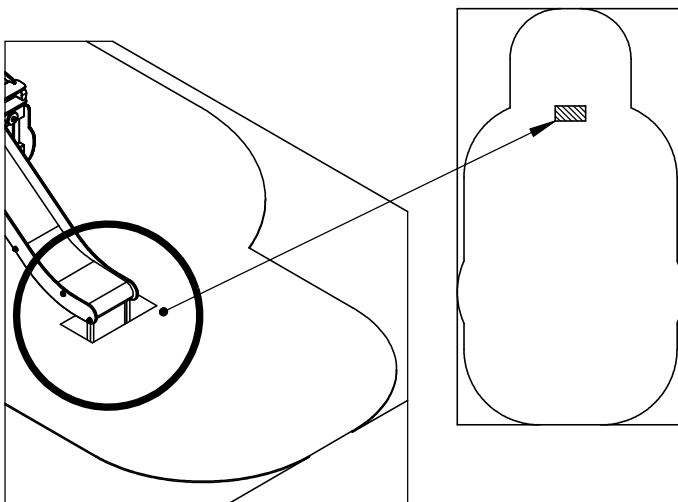

2


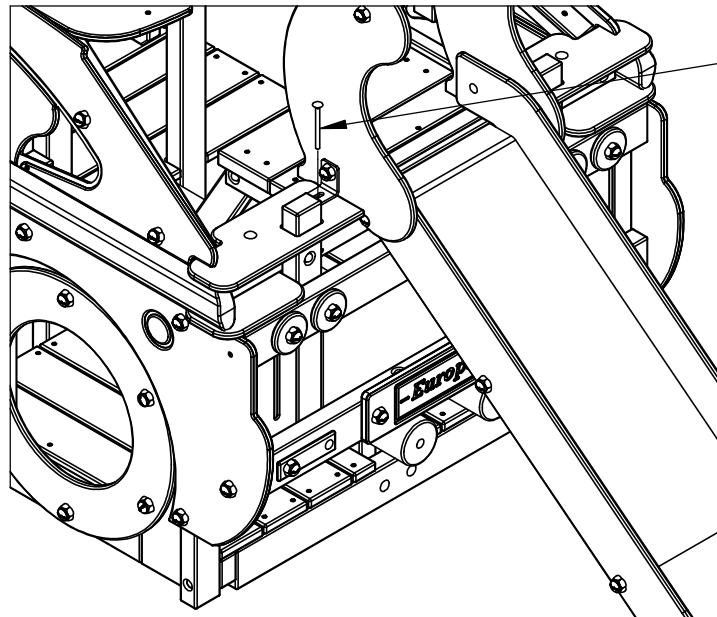


M8x105
2X



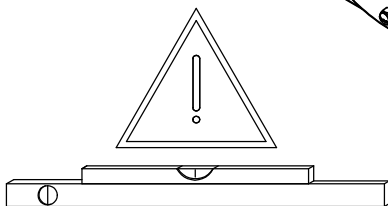


3


T010-A

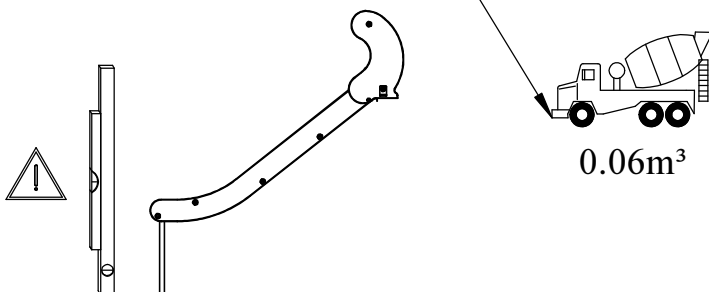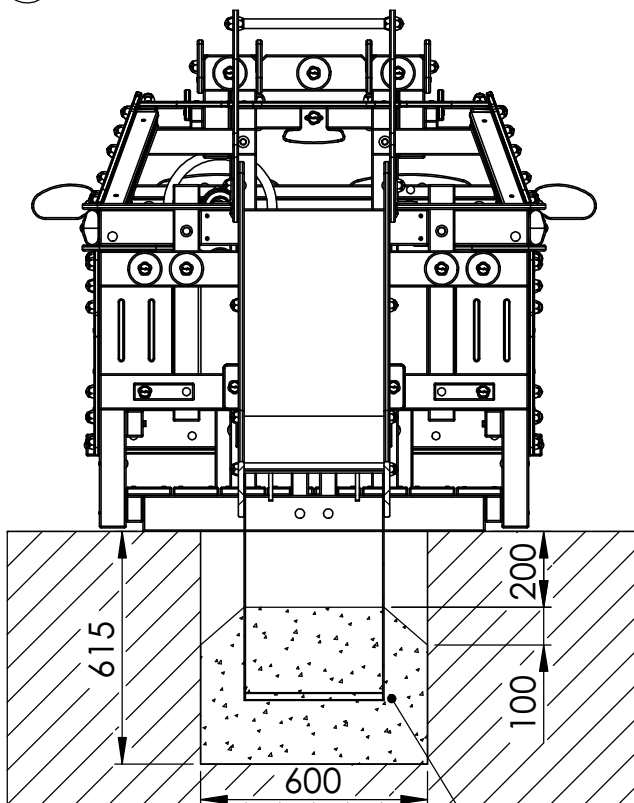


T010-B

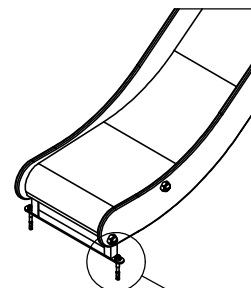
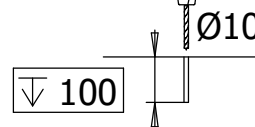
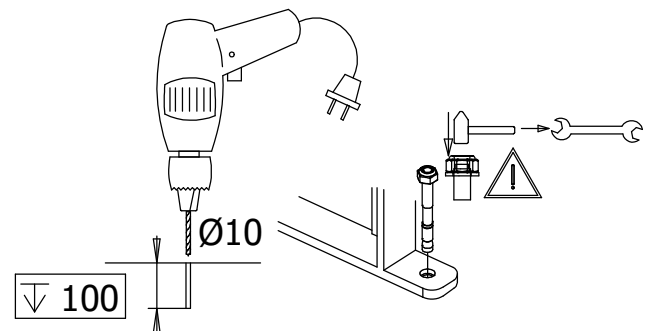


M10x95
2X

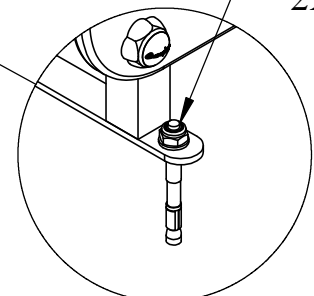

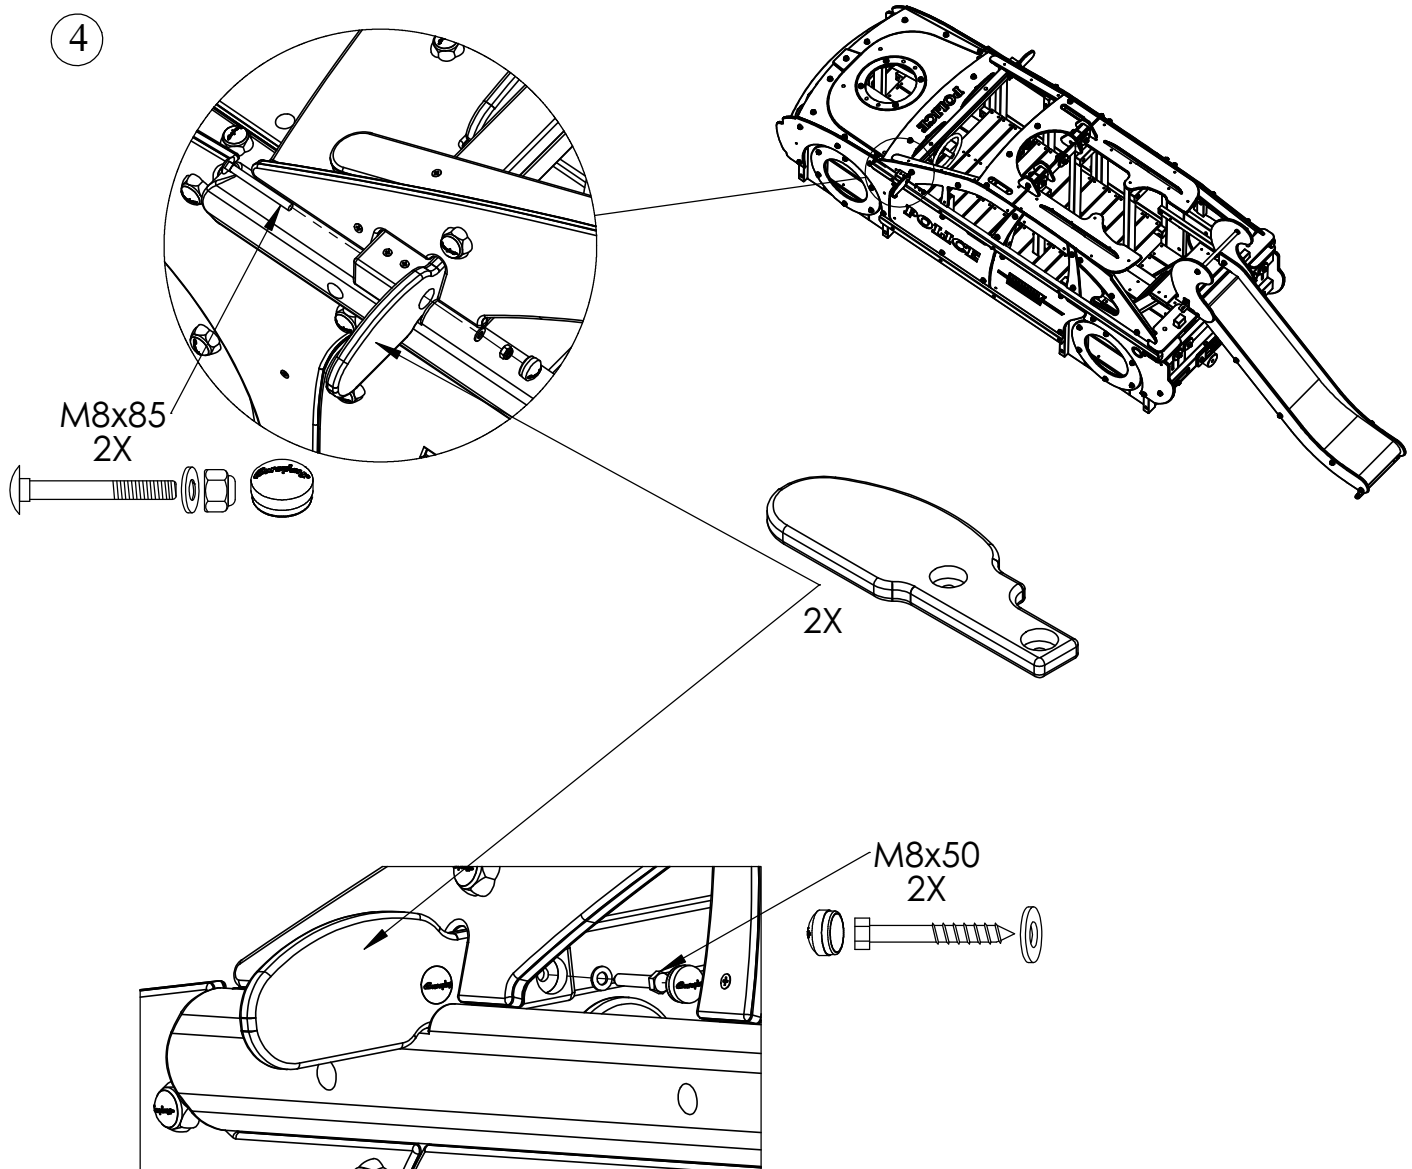

⑤

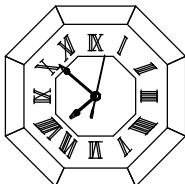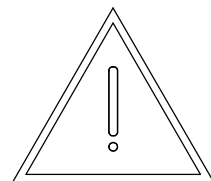**72h**

⑥

Bij droog weer moeten alle bouten en schroeven opnieuw aangespannen worden.
Par temps sec il faut resserrer régulièrement toute la visserie.
By dry and warm weather check the tightness of all bolts and screws.
Bei trockenem Wetter müssen alle Schrauben und Bolzen aufs neue angespannt werden.
Para el tiempo seco, se necesita cerrar o ajustar los tornillos y tuercas.
Con tempo asciutto, tutti i bulloni e le viti devono essere avvitati nuovamente.