





$\pm 22.5\text{m}^2$

F500A


Montagehandleiding - Notice de montage
Assembling manual - Instrucciones para el montaje
Montageanleitung - Istruzioni di installazione

Dat.: 19/10/2020

Page: 2/8

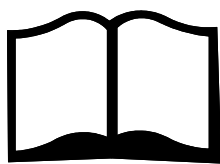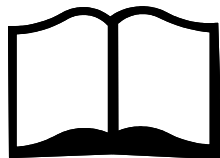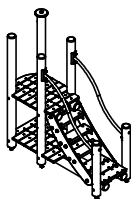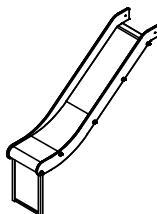**F500A**
BASIC**G490A**


1x F100-As-Klimwand-01

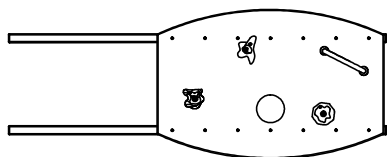

1500 x 593 x 113

15.92kg


2x F100-M-VeiligB-01

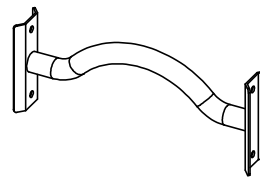

424,9 x 161,8 x 70

1.44kg

1x F700-M-Balstrde-01

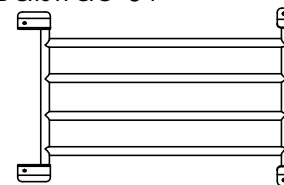


795,2 x 600 x 313

4.59kg

4x M8x50

2x M8x70

8x M10x50






6x M8




12x White





①

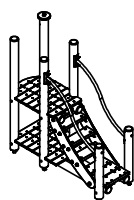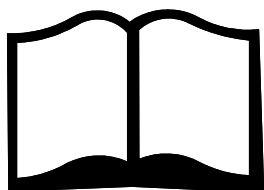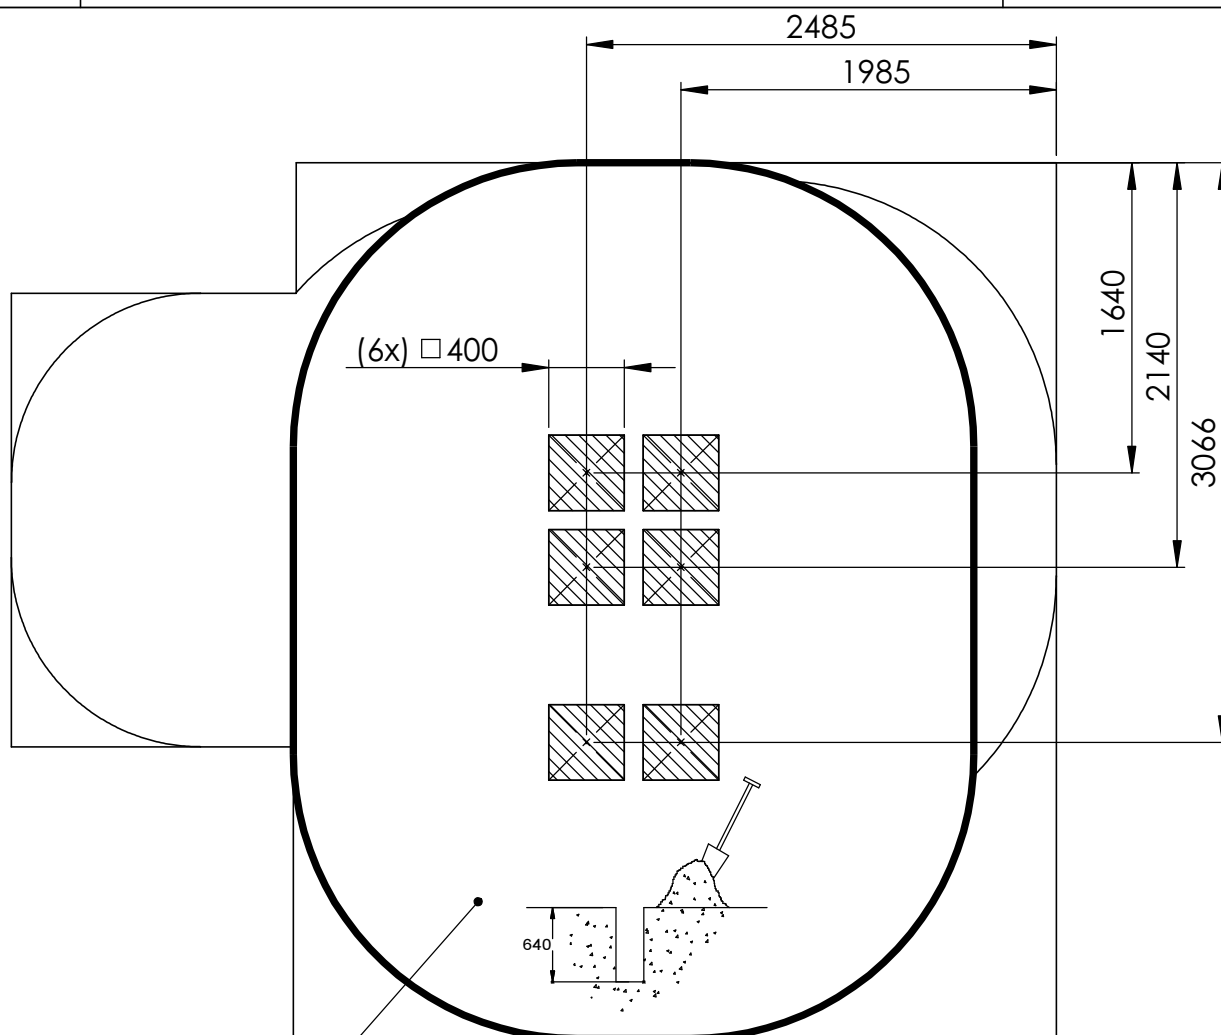


F500A
BASIC

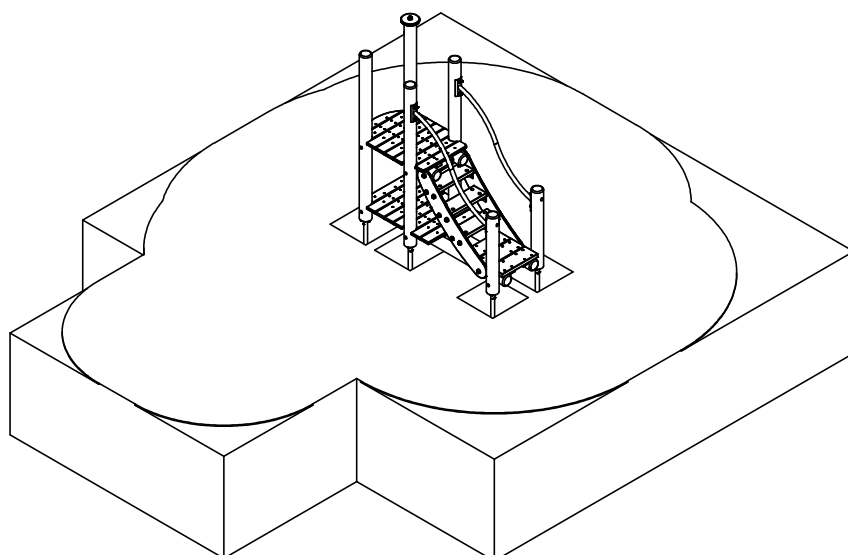


②

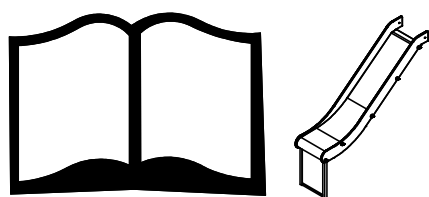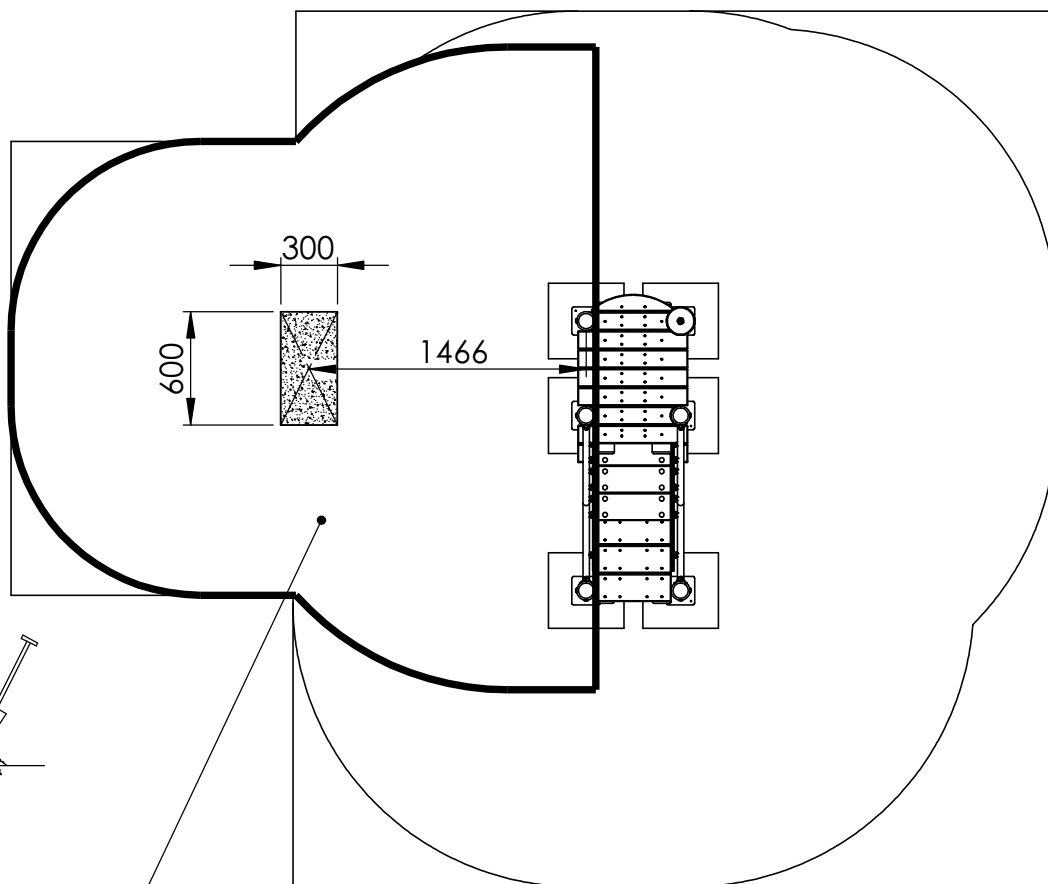


G490A

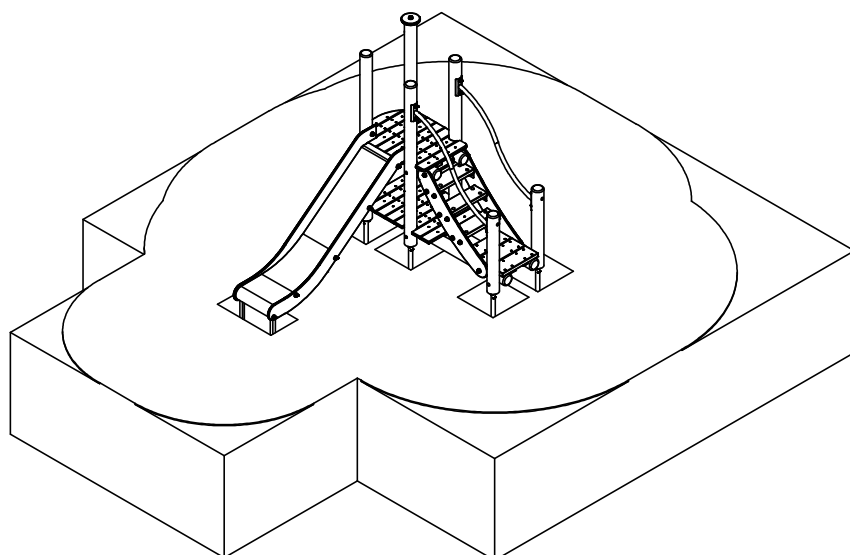




3

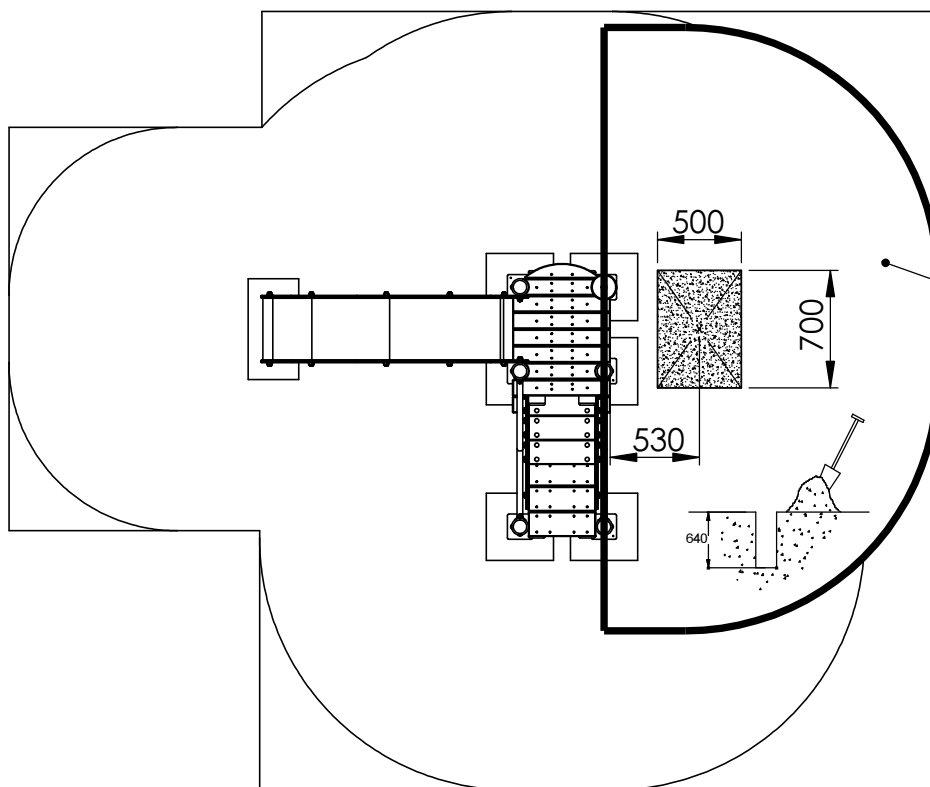

F100-As-Klimwand-01

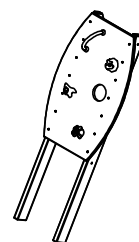


F100-As-Klimwand-01
1x

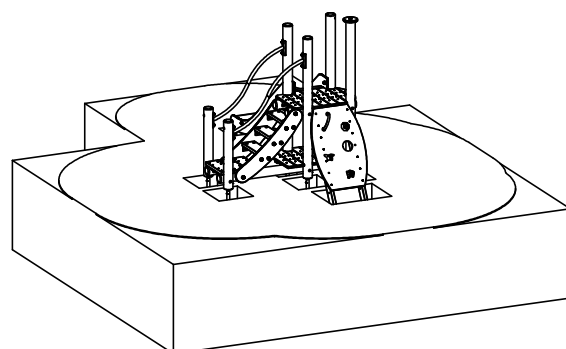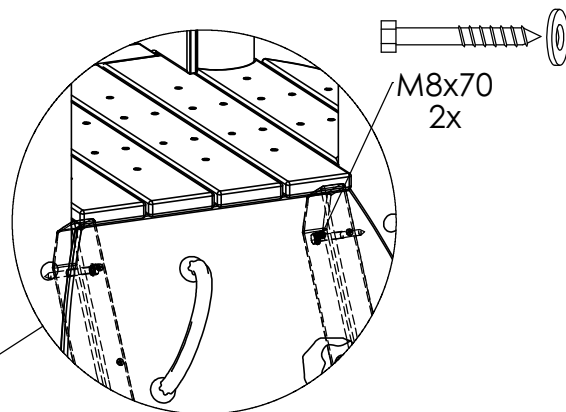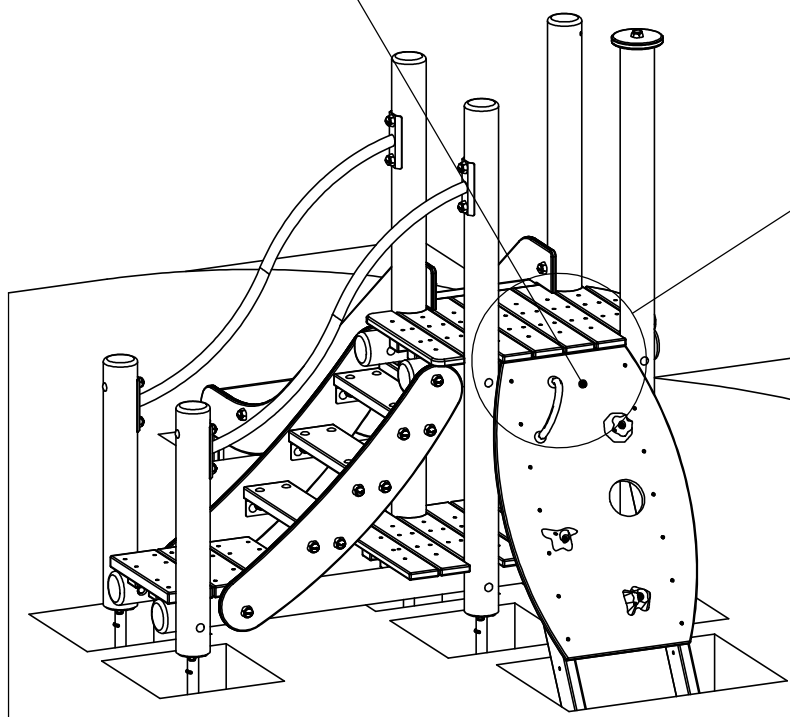


4

F700-M-Balstrde-01
1x

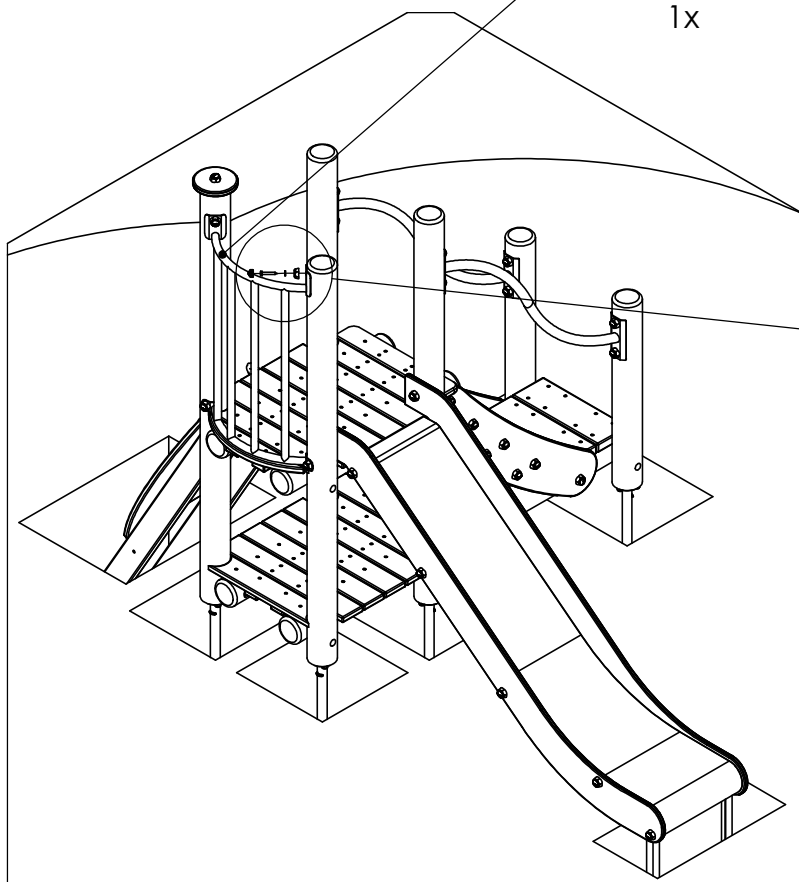


M8x50

4x




5

F100-M-VeiligB-01
1x

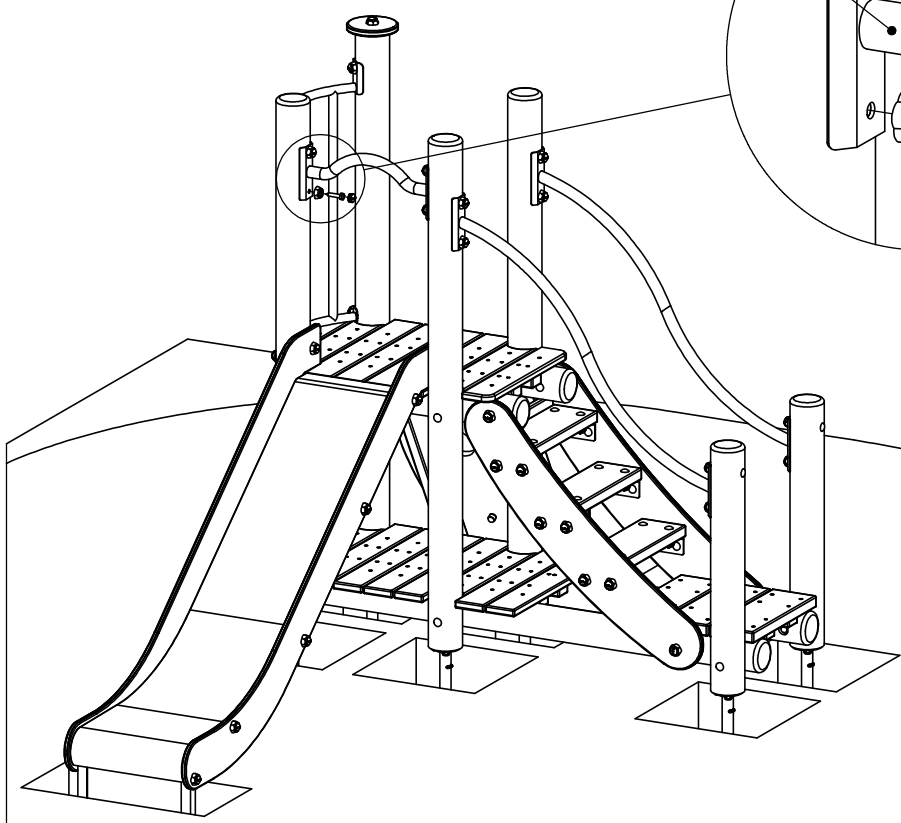


M10x50

4x

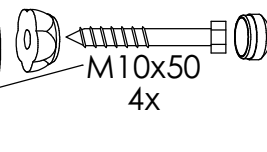


600

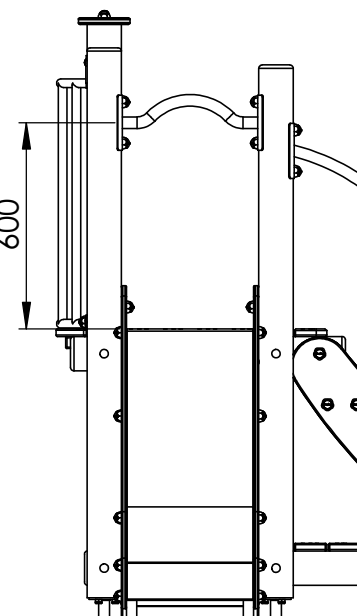



6

F100-M-VeiligB-01
1x



M10x50
4x

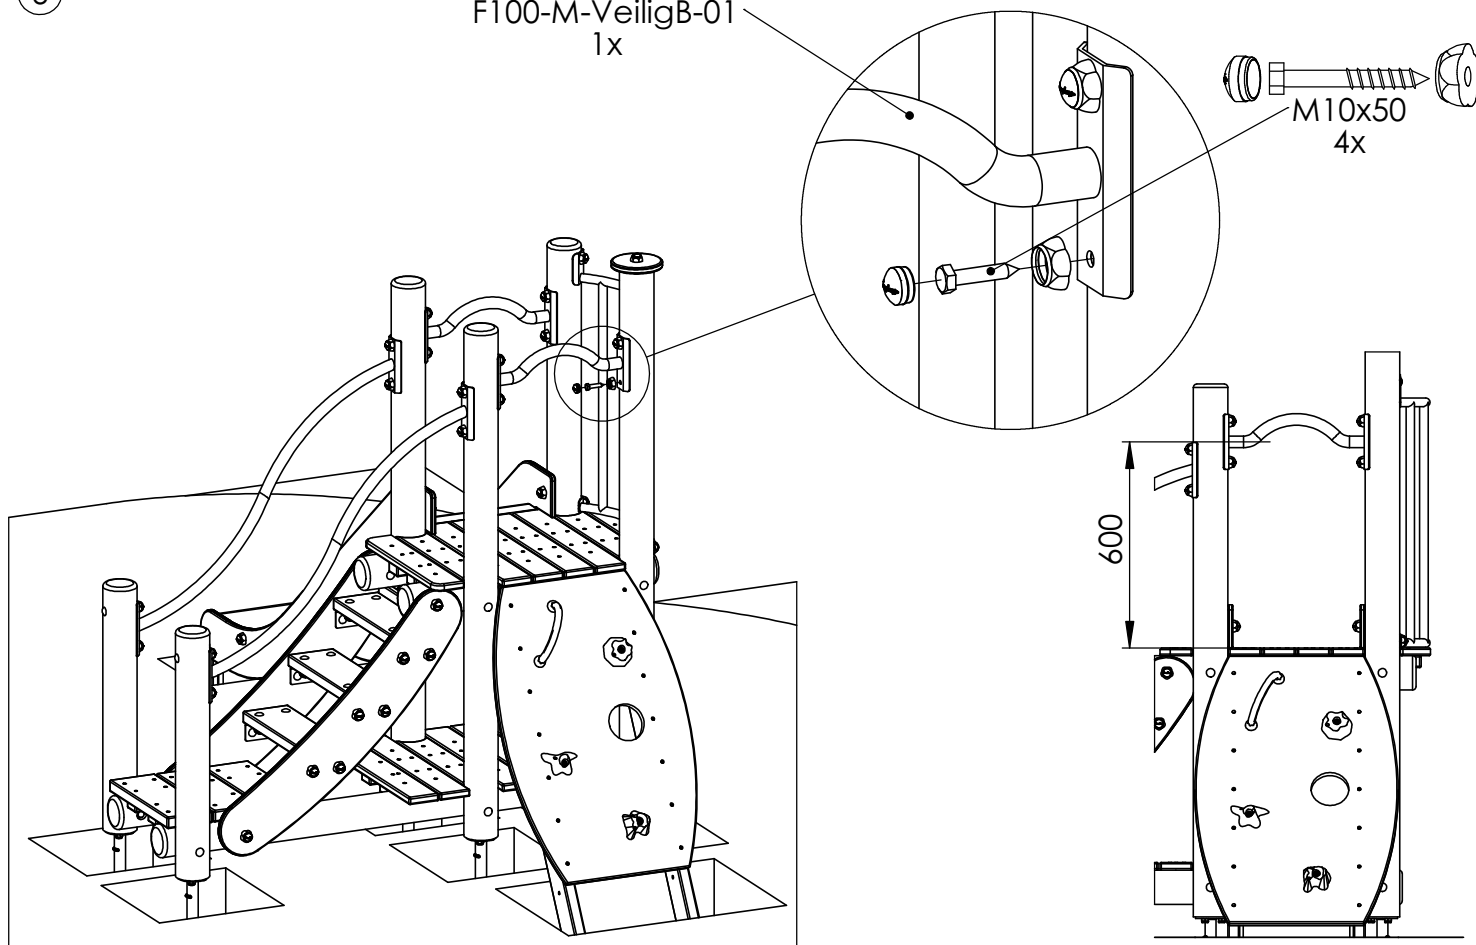




7

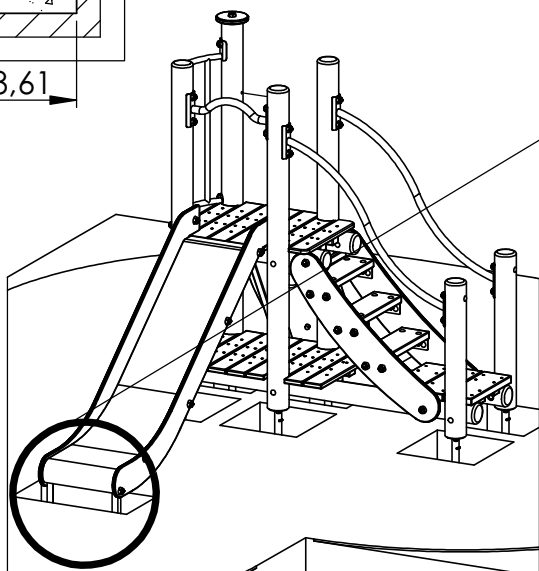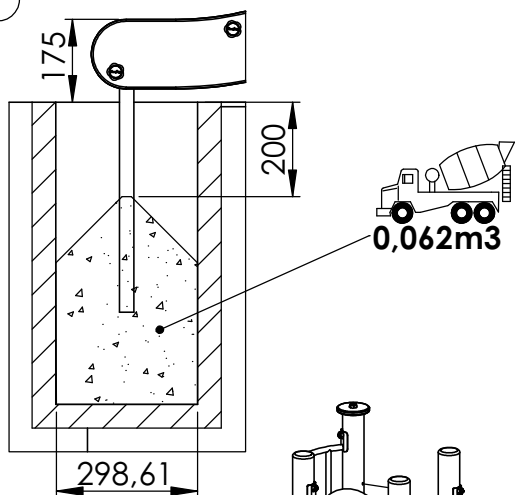

8

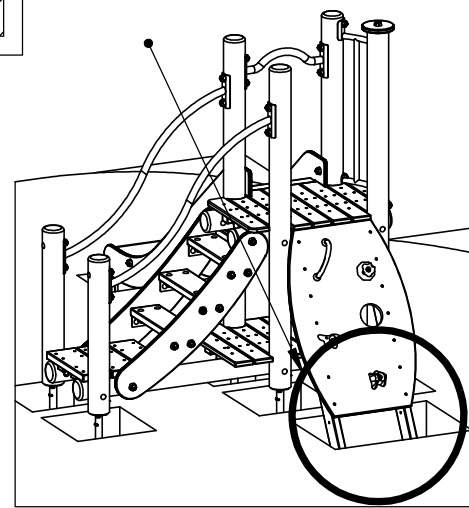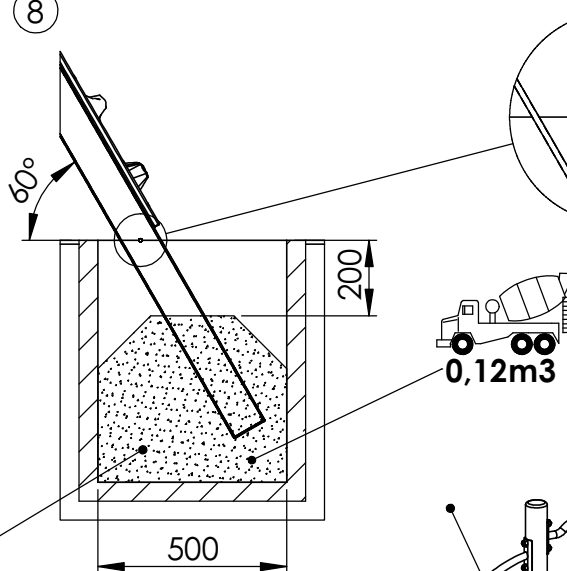


9

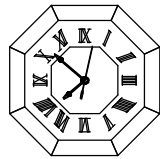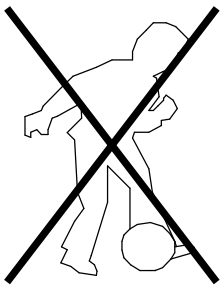

72h

10

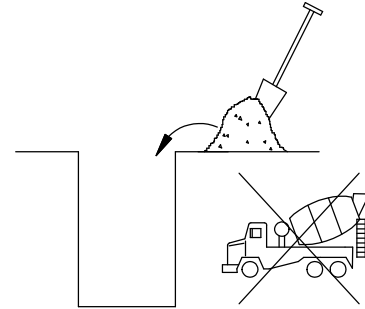

11

Bij droog weer moeten alle bouten en schroeven opnieuw aangespannen worden.
Par temps sec il faut resserrer régulièrement toute la visserie.
By dry and warm weather check the tightness of all bolts and screws.
Bei trockenem Wetter müssen alle Schrauben und Bolzen aufs neue angespannt werden.
Para el tiempo seco, se necesita cerrar o ajustar los tornillos y tuercas.
Con tempo asciutto, tutti i bulloni e le viti devono essere avvitati nuovamente.

