

T701A/B

Terreinwagen
Voiture tout-terrain
Safari trucker
Jeep
Coche todoterreno
Fuoristrada

Montagehandleiding Notice de montage Assembling manual Montageanleitung Instrucciones para el montaje Istruzioni di installazione


Leeftijd
Age group
Age / Alter
Edad / Età
2 - 8

EUROPLAY nv
Eegene 9
B-9200 DENDERMONDE
tel. 32.52.22 66 22
fax.32.52.22 67 22
www.europlay.eu

Dat.: 10/12/2021


Rev.: -

Page: 1/6

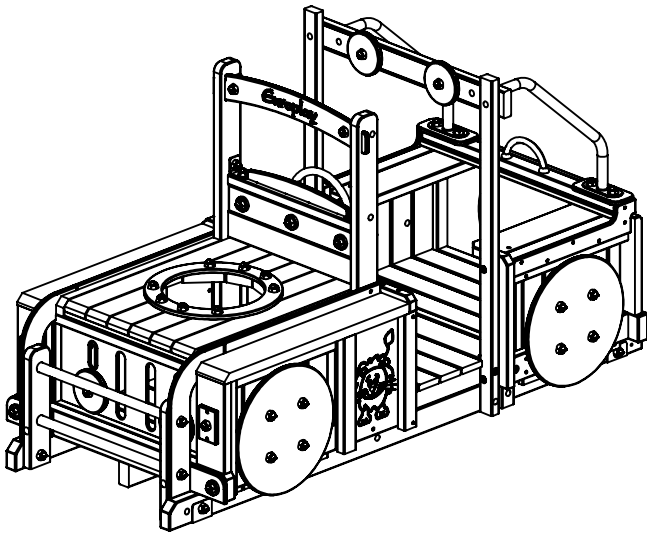


±150kg

VALHOOGTE / HAUTEUR DE CHUTE /
FALL HEIGHT / FALLHÖHE/
ALTURA DE CAÍDA / ALTEZZA DI CADUTA

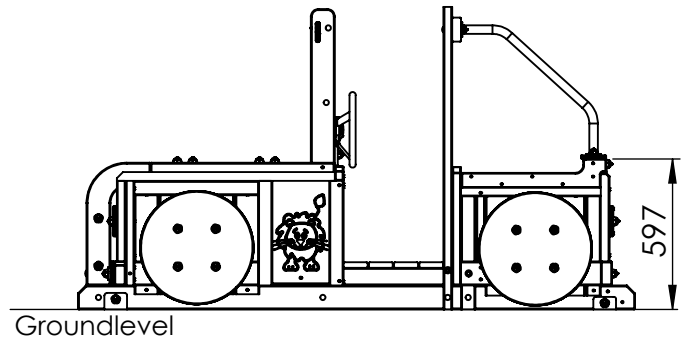


Groundlevel

VEILIGHEIDSAFSTAND / ESPACE DE CHUTE / SAFETY AREA /
SICHERHEITSAFSTAND / ZONA DE SEGURIDAD / DISTANZA DI SICUREZZA



Samenvoegingszone T900+T801
Zone de liaison T900+T801
Verbindungsfeld T900+T801
Linking zone T900+T801
Zona de conexión T900+T801
Zona di allineamento T900+T801

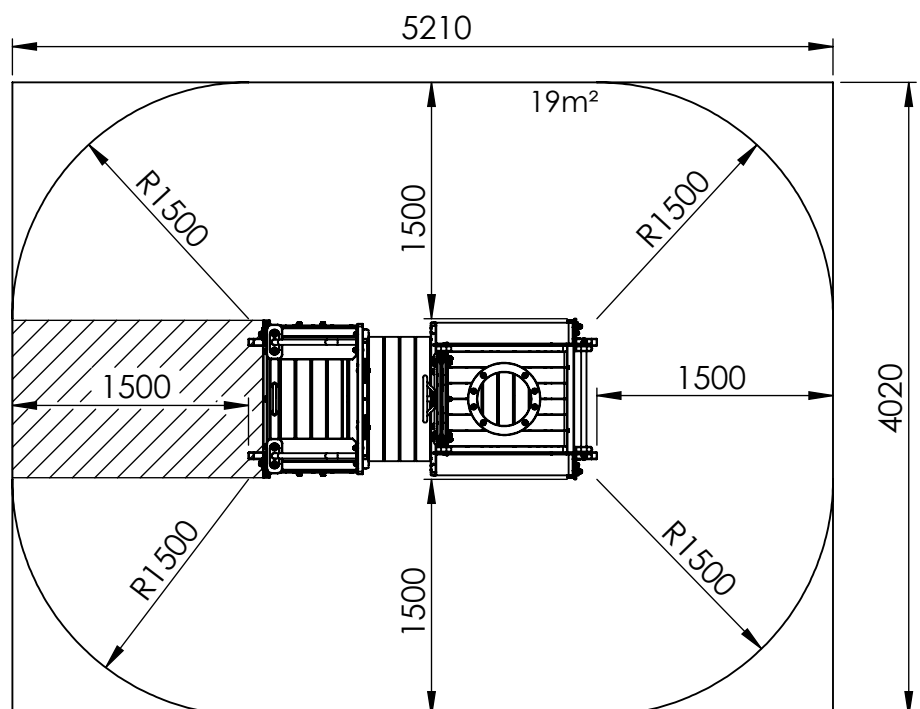


AFMETINGEN
DIMENSIONS
MASSE
DIMENSIONES
DIMENSIONI
L: 2.3m
Br: 1.1m
H: 1.2m

21m2

Benodigdheden - Liste des pièces - Materials - Benötigtes - Accesorios - Requisiti


1x T701-Terreinwagen

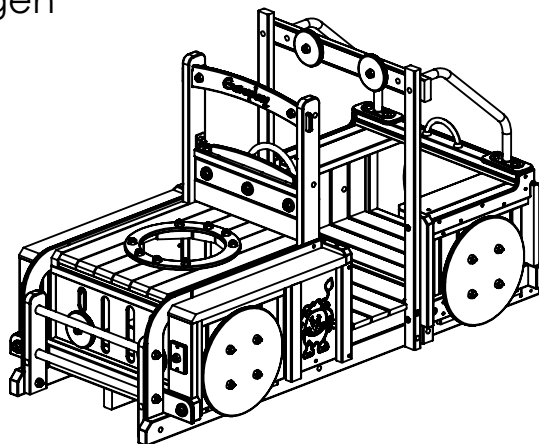


142kg

T701-A

4x White




4x M8x35



4x M8



4x Lb-M-Anker-01

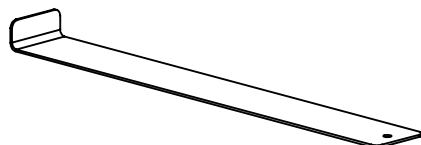


685x90x40


±1.52kg

T701-B

4x White



4x M8x35



4x M8x60


4x M8



4x Ø10x50




4x Lb-M-ZwrHoek-01






±0.14kg

65x65x40

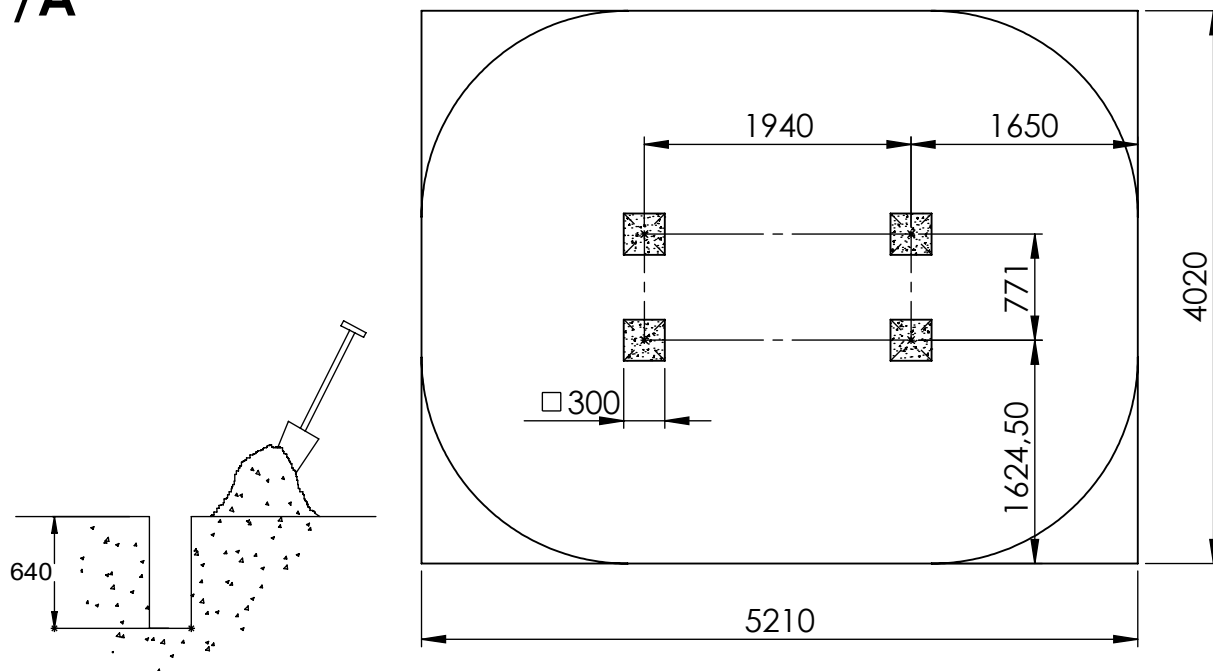
/A

/A.1

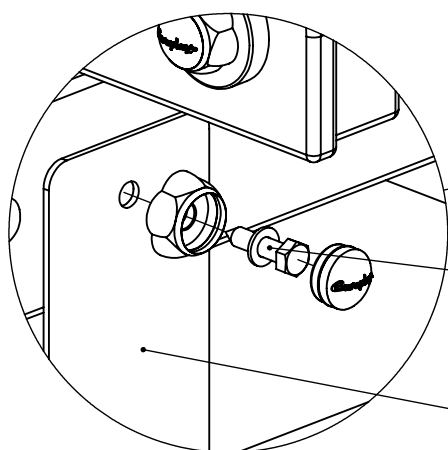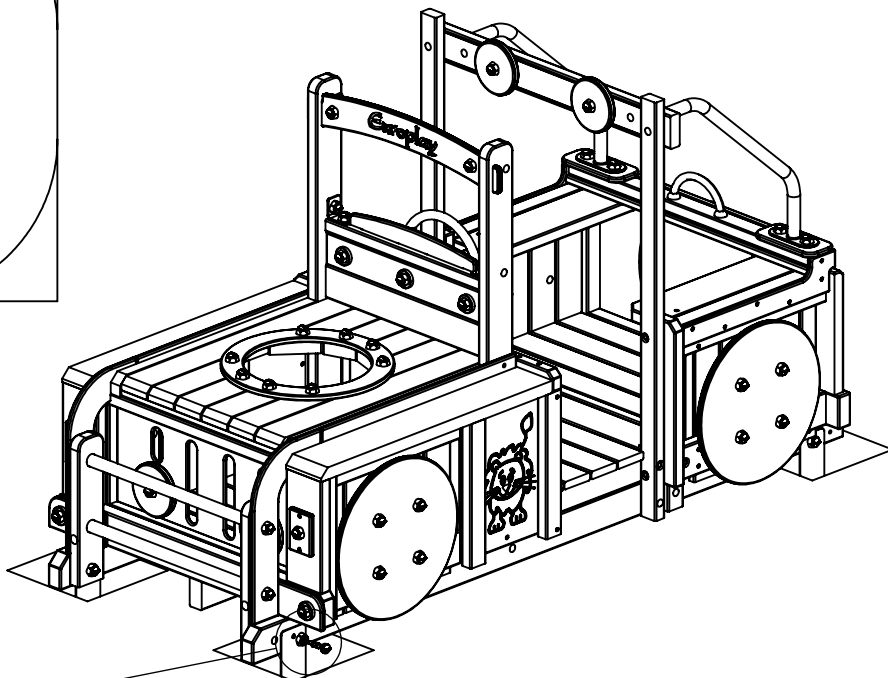
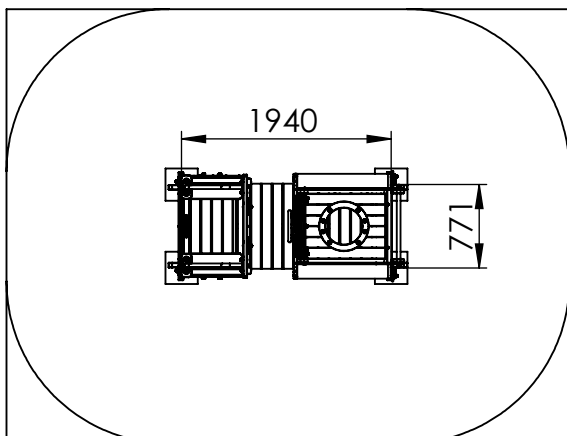


Lb-M-Anker-01
4x


M8x35
4x





/A.2

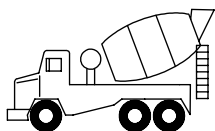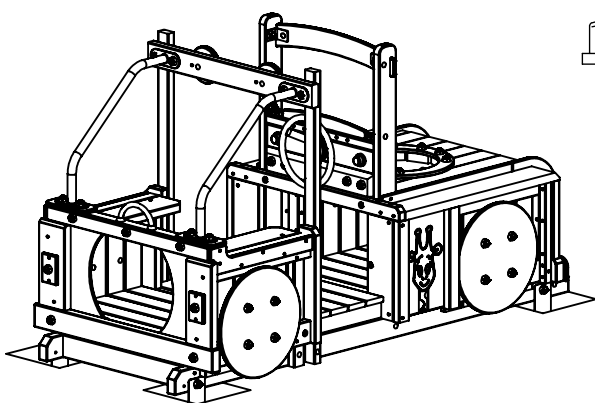






= 0.22 m³

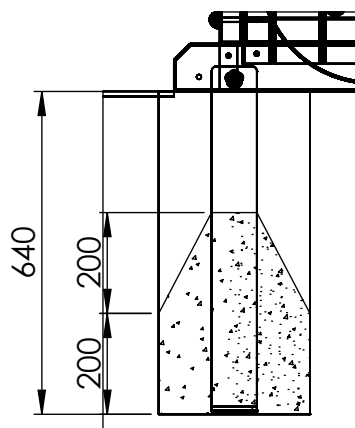

/A.3


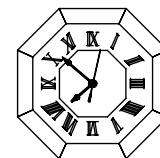





72h

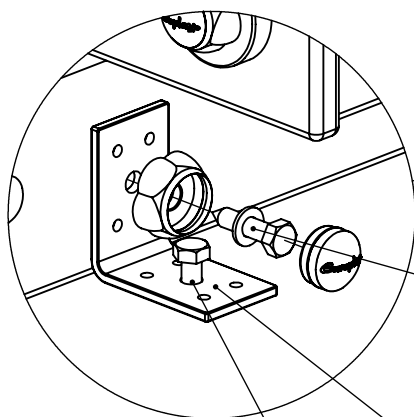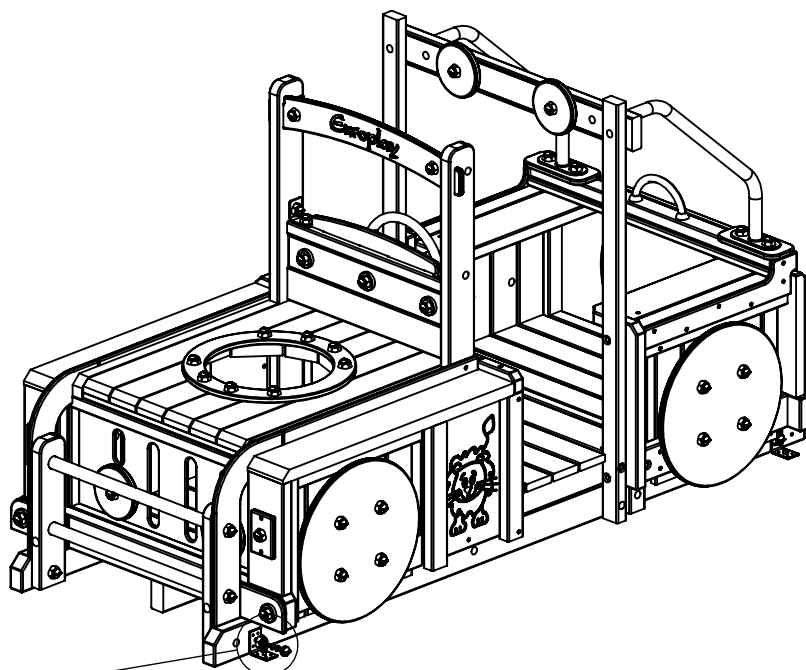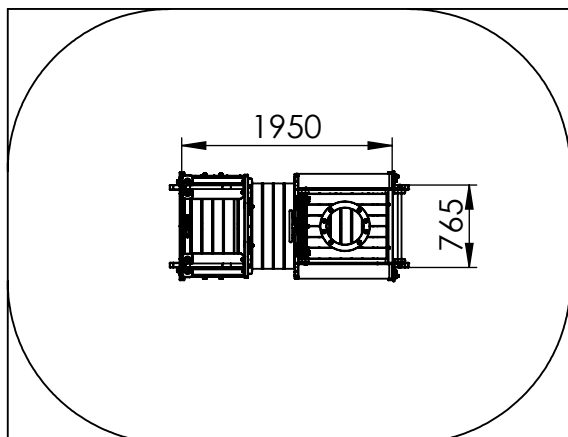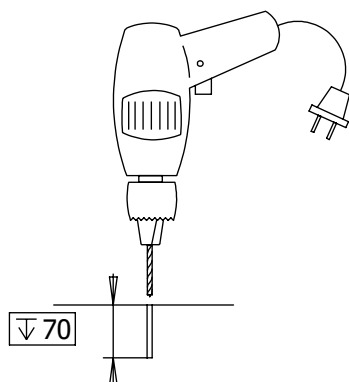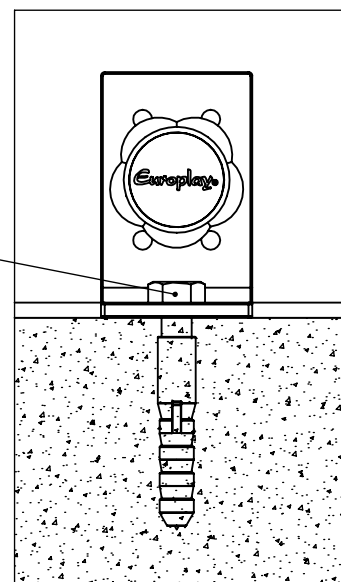/BM8x35
4xLb-M-ZwrHoek-01
4xM8x60
4x

70

Technical drawing of a rectangular structure with rounded ends. The overall width is 7723 and the overall height is 4020. The corners are rounded with a radius of R1500. The structure features a central section with vertical lines and a circular detail on the right side. The drawing includes dimension lines and labels for the width, height, and corner radius.

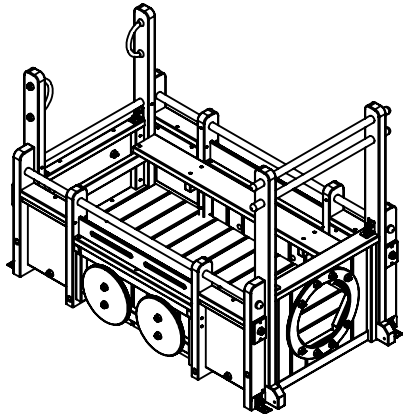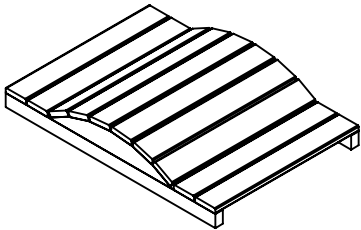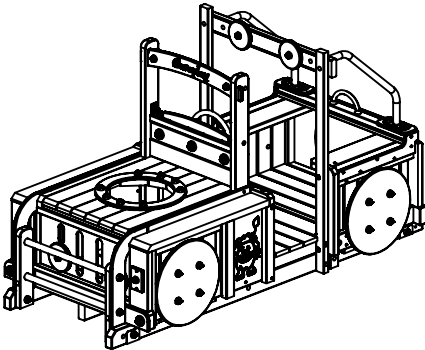T801-Aanhangwagen	T900-Verbindingsbruggetje	T701-Terreinwagen
		

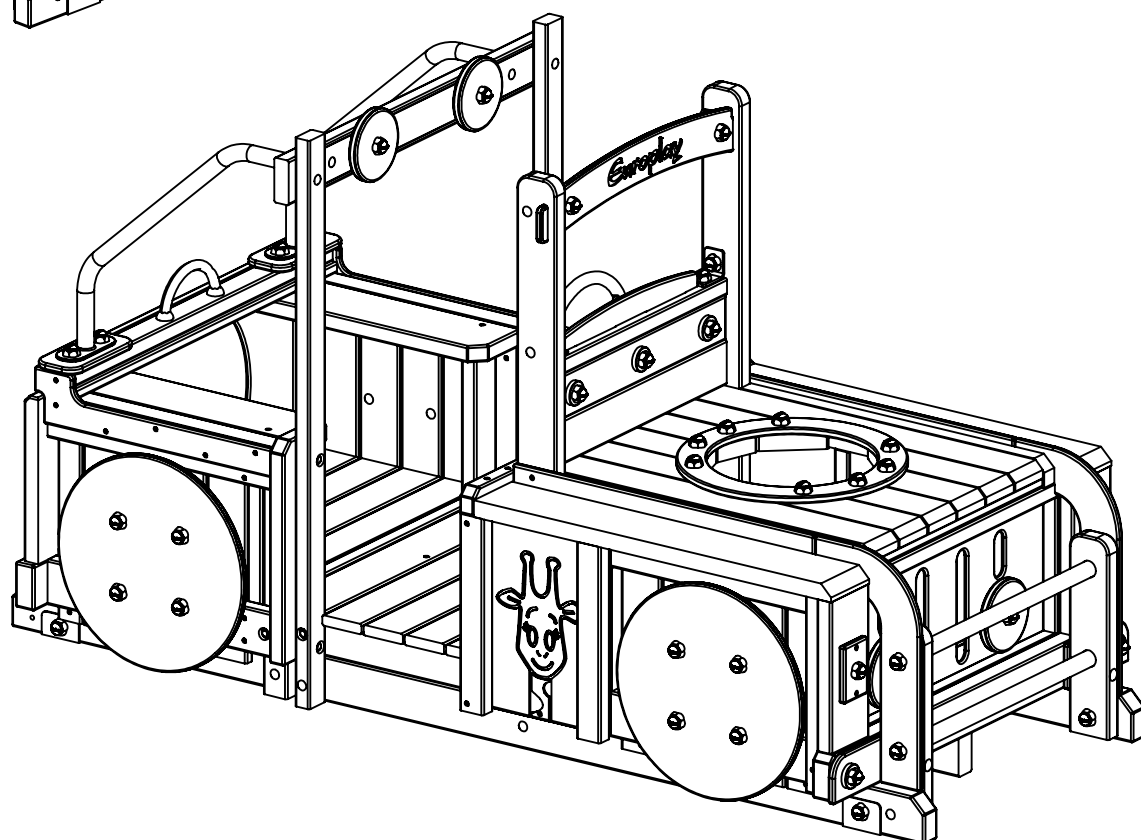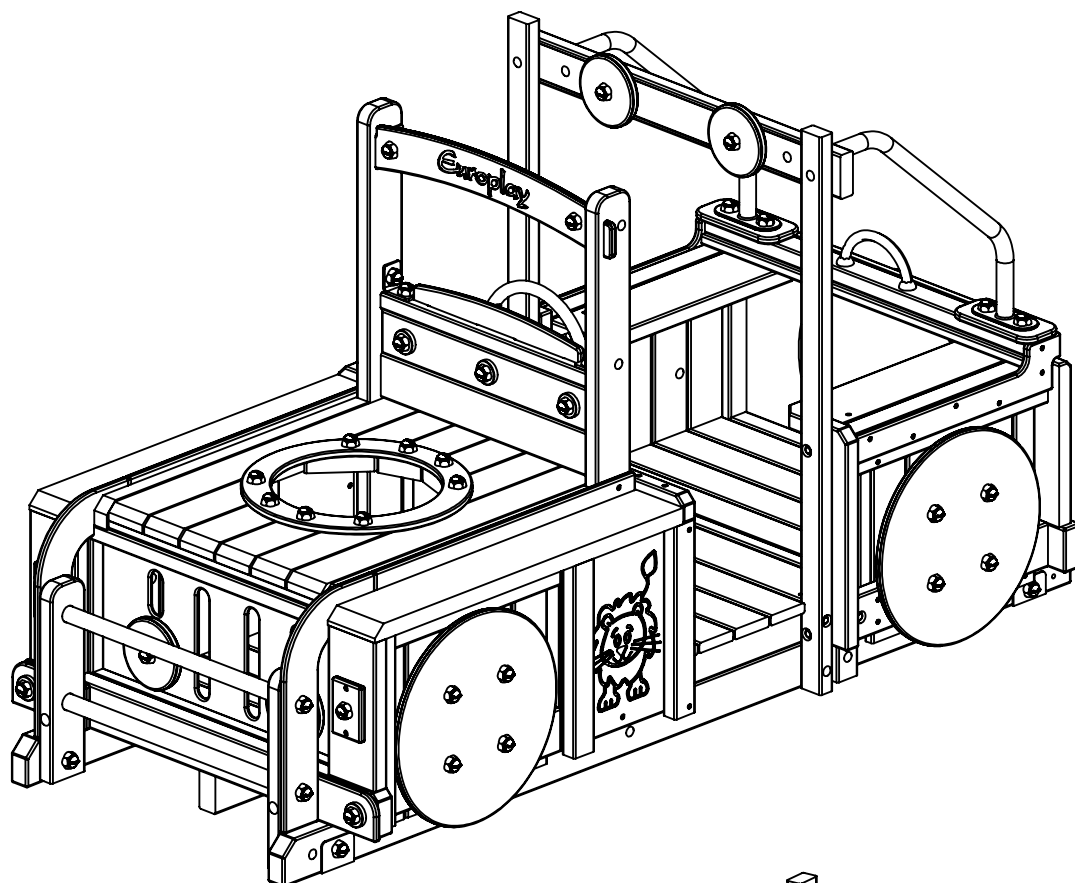

Bij droog weer moeten alle bouten en schroeven opnieuw aangespannen worden.
Par temps sec il faut resserrer régulièrement toute la visserie.
By dry and warm weather check the tightness of all bolts and screws.
Bei trockenem Wetter müssen alle Schrauben und Bolzen aufs neue angespannt werden.
Para el tiempo seco, se necesita cerrar o ajustar los tornillos y tuercas.
Con tempo asciutto, tutti i bulloni e le viti devono essere avvitati nuovamente.